 




MODEL: RS47BM
SECURITY SAFE
INSTALLATION AND USAGE INSTRUCTIONS

Your Avanti Room Security Safe is supplied with the following:

1 – Security Safe Unit	4 – 1.5V – AA Size Batteries	4 – Rubber Feet
2 – Emergency Access Keys	1 – Felt Liner	
1 – Installation / Usage Guide	Installation Screws	

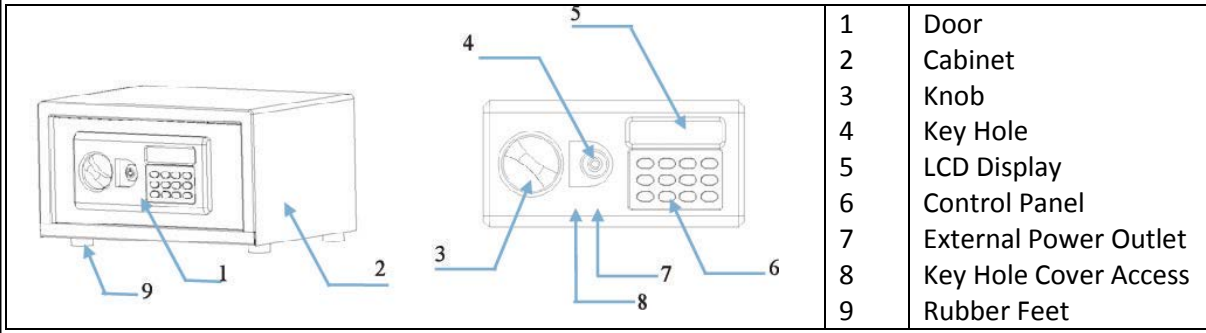

 
INSTALLING YOUR SECURITY SAFE

When installing your safe, be sure the location is sturdy enough to support the unit and is both secure and easy to access.

Safe can be installed onto either a concrete or wooden surface.

When installing use a 25/64" (10mm) drill bit and screws.

To prevent removal of your security safe, it is recommended to use Allen type screws (not included) to affix the unit to the installation location.

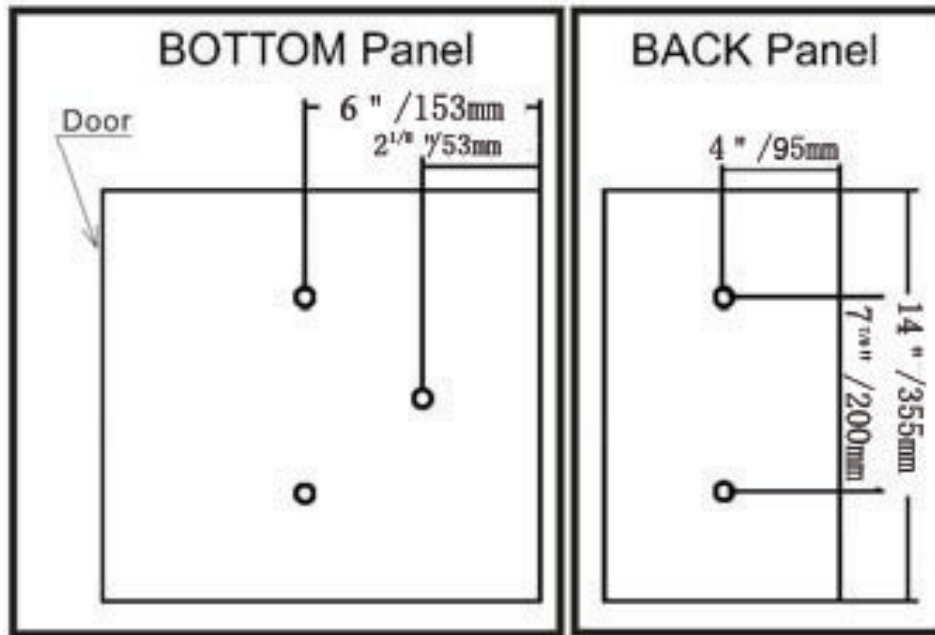

INITIAL SETUP AND CONFIGURATION.

Manual Operation (Open using the key).

- User will need to remove the key hole cover by placing a small pin or similar object in the hole below the keyhole and key hole cover.
- Insert the emergency access key into the lock and turn clockwise to open the safe.
- While the door is open, change the batteries on the control panel or reset the passcode as described in the “Resetting the Password” section.

After you have installed the unit in its final location, proceed to set up digital access controls.

- 1) Using the Emergency Access Key, open the safe.
- 2) Open the battery compartment cover.
- 3) Following the image shown in the battery compartment install the 4 AA sized batteries.
- 4) Close the battery compartment cover.
- 5) The words “ALL READY” will be displayed on the LCD display for approximately 1 second; the security safe will then go into “STANDBY Mode”.
- 6) Once in “STANDBY Mode” the LCD display will show the date and time (YY, MM, DD).
- 7) Press the “ # ” button to activate the keypad.
- 8) Using the keypad, enter the initial setup password “1234”
- 9) Press the “ # ” button to confirm

Setting the Date, Time and Weekday:

- After the batteries have been installed, the LCD display will show “00-01-01” (Year-Month-Date) and “Week 1” (Monday) “00-00” (Time).
- Press the “*” to enter the programming mode, the “00” will begin to flash.
- Increase by pressing the “ 8 ” or Decrease by pressing the “ 0 “, when finished press the “#” to move to the next item.

When finished programming, do not touch any key for approximately 7 seconds and the program will take effect.

GUEST / USER CODE SETUP

To reset the access code read and follow the steps below.

- 1) With the door open, press the “#” to activate the key pad, enter the default code (1234) and press the “#” key to confirm.
- 2) You will hear two beeps and the LCD display will show “OPEN”
- 3) Within 7 seconds press the “ * ” button to change the primary password.
- 4) After pressing the “ * ” button “ - - ” will be shown in the LCD display.
- 5) Enter the new 4 – 8 digit code and press the “ # ” to confirm.
- 6) Once the code has been confirmed the word “ INTO “ will be shown in the LCD screen.

Additional Instructions:

OPENING AND CLOSING THE SAFE

To open the safe

- 1) Press the “ # “ to activate the keypad
- 2) Enter the 4 – 8 digit password. The system will beep twice and show “ OPEN “ on the LCD display.
- 3) Turn the control knob clockwise to open the door.

To close the safe

 
Simply close the door and turn the control knob counter-clockwise to lock.

RESETTING DEFAULT SETTING

With the door open, press the red button on the back cover of the door to reset the unit back to the default setting(initial setup password is“1234”)

Tips:

For your convenience four (4) rubber feet are included with each safe and can be installed if needed.

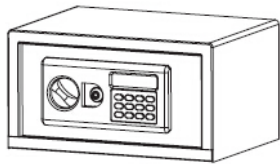

← Rubber Feet

Avanti[®]

Avanti Products, Miami, FL 33172

Service Issues: 1 – 800 – 220 – 5570