


CK30-1 Exploded View

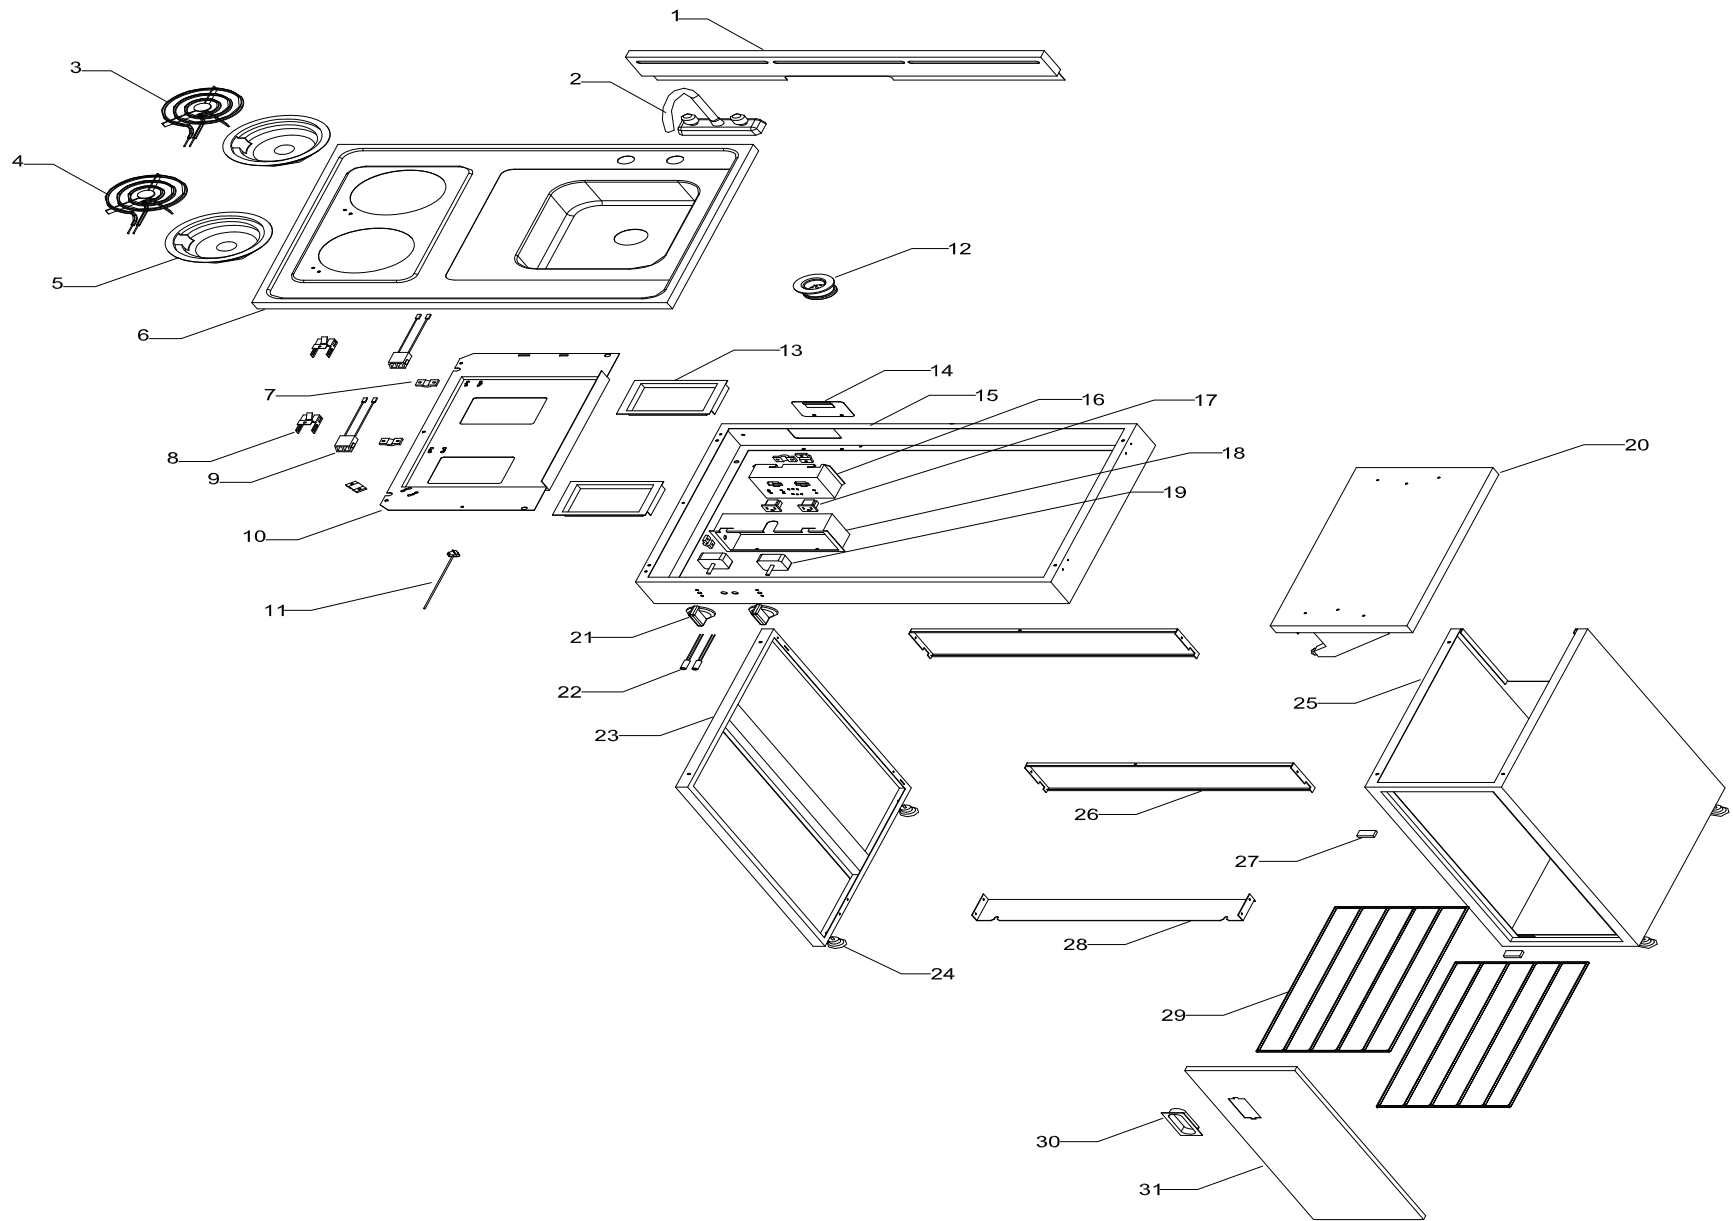

CK30-1 Parts List

No.	Parts No.	Description	Q'ty
1	CK30-01N	S/S Back Splash New Style	1
2	CK30-04	Water Faucet	1
3	CK30-02N	500W Burner New Style	1
4	CK30-03N	900W Burner New Style	1
5	CK30-04N	Reflector Bowl New Style	2
6	CK30-05N	S/S Counter Top New Style	1
7	CK30-09	Cord Clamp	5
8	CK30-08N	Metal Clip	2
9	CK30-09N	Connector	2
10	CK30-10N	Bottom Plate	1
11	CK30-11N	Power Supply Cord for Burners	1
12	CK30-07	Sink Strainer	1
13	CK30-14N	Water Drip Tray	2
14	CK30-15N	Junction Box Cover	1
15	CK30-15	Middle Cabinet	1
16	CK30-17N	Junction Box	1
17	CK30-18N	Receptacle	2
18	CK30-19N	Electrical Box	1
19	CK30-10N	Power Switch New Style	2
20	CK30-26	Side Tray (Accessory)	1
21	CK30-16	Knob	2
22	CK30-23N	Indicating Light	2
23	CK30-17	Left Plate	1
24	CK30-19N	Leg	6
25	CK30-25	Bottom Cabinet	1
26	CK30-18	Reinforce Plate	2
27	CK30-24	Magnetic Part	2
28	CK30-20	Bottom Supporter Plate	1
29	CK30-21	Wired Shelf	2
30	CK30-23	Handle	1
31	CK30-22	Metal Door	1