


Explosion View

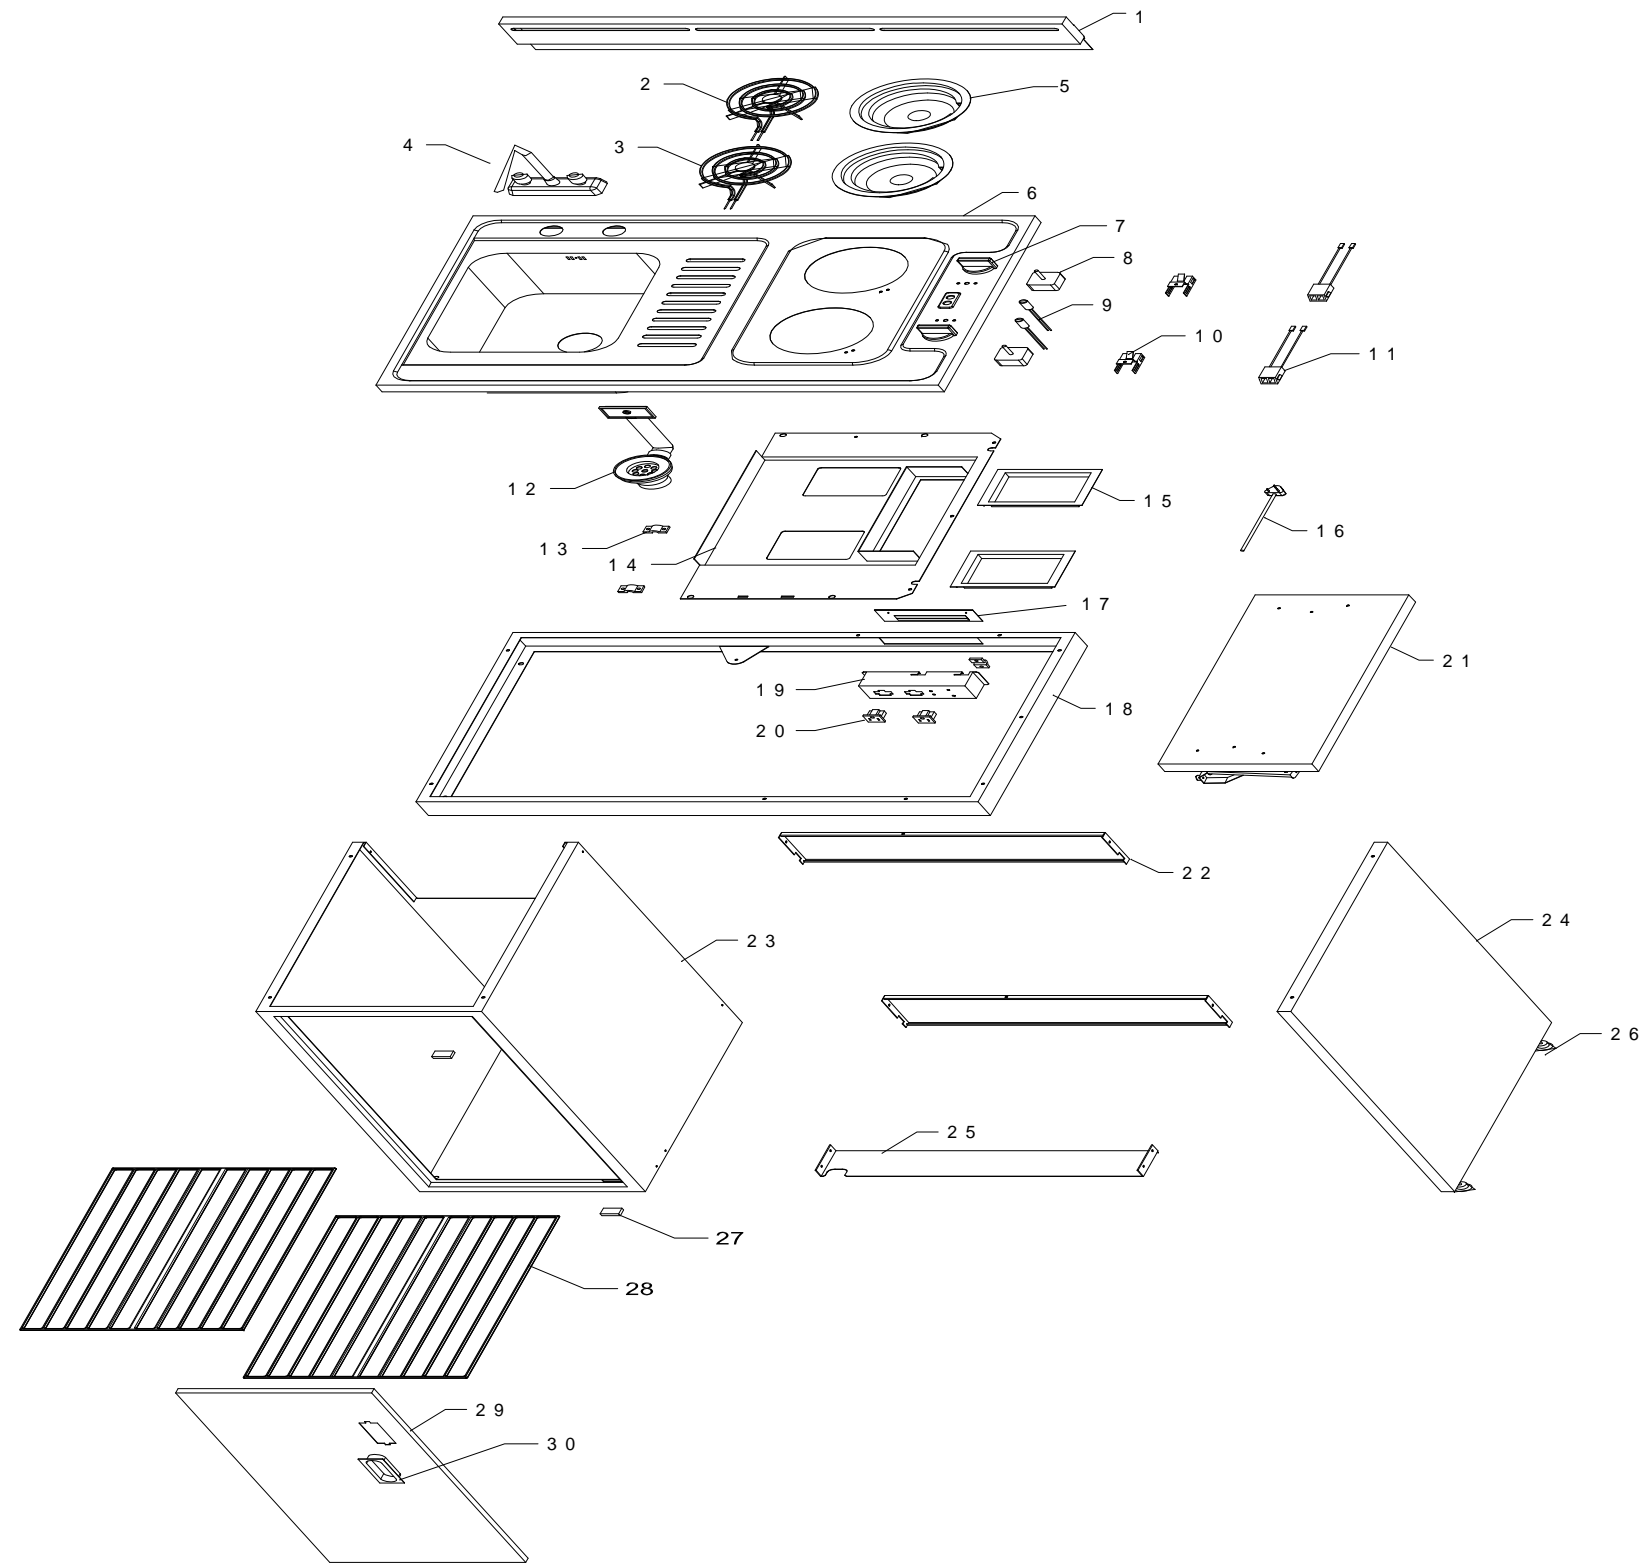

CK36-01	Backsplash	Parts List	
CK36-02	500W burner		
CK36-03	900W burner		
CK36-04	Faucet		
CK36-05	Reflector Bowl		
CK36-06	S/S countertop		
CK36-07	Knob		
CK36-08	Power Switch		
CK36-09	Indicating Light		
CK36-10	Meal Clip		
CK36-11	Connector		
CK36-12	Stainer		
CK36-13	Clamp		
CK36-14	Electrical Box Tray		
CK36-15	Water Drip Tray		
CK36-16	Power Supply Cord for burner		
CK36-17	Junction Box Door		
CK36-18	Countertop Holder		
CK36-19	Junction Box		
CK36-20	Receptacle		
CK36-21	Side Tray (accessory)		
CK36-22	Reinforcing Plate		
CK36-23	Bottom Cabinet		
CK36-24	Side Plate		
CK36-25	Bottom Supporting Plate		
CK36-26	Leg		
CK36-27	Magnetic Part		
CK36-28	Shelf		
CK36-29	Door		
CK36-30	Handle		