




Cooker

DER 200 W

DER 200 W

C5N0AV004W








tav. 1
cat. 18.C3939

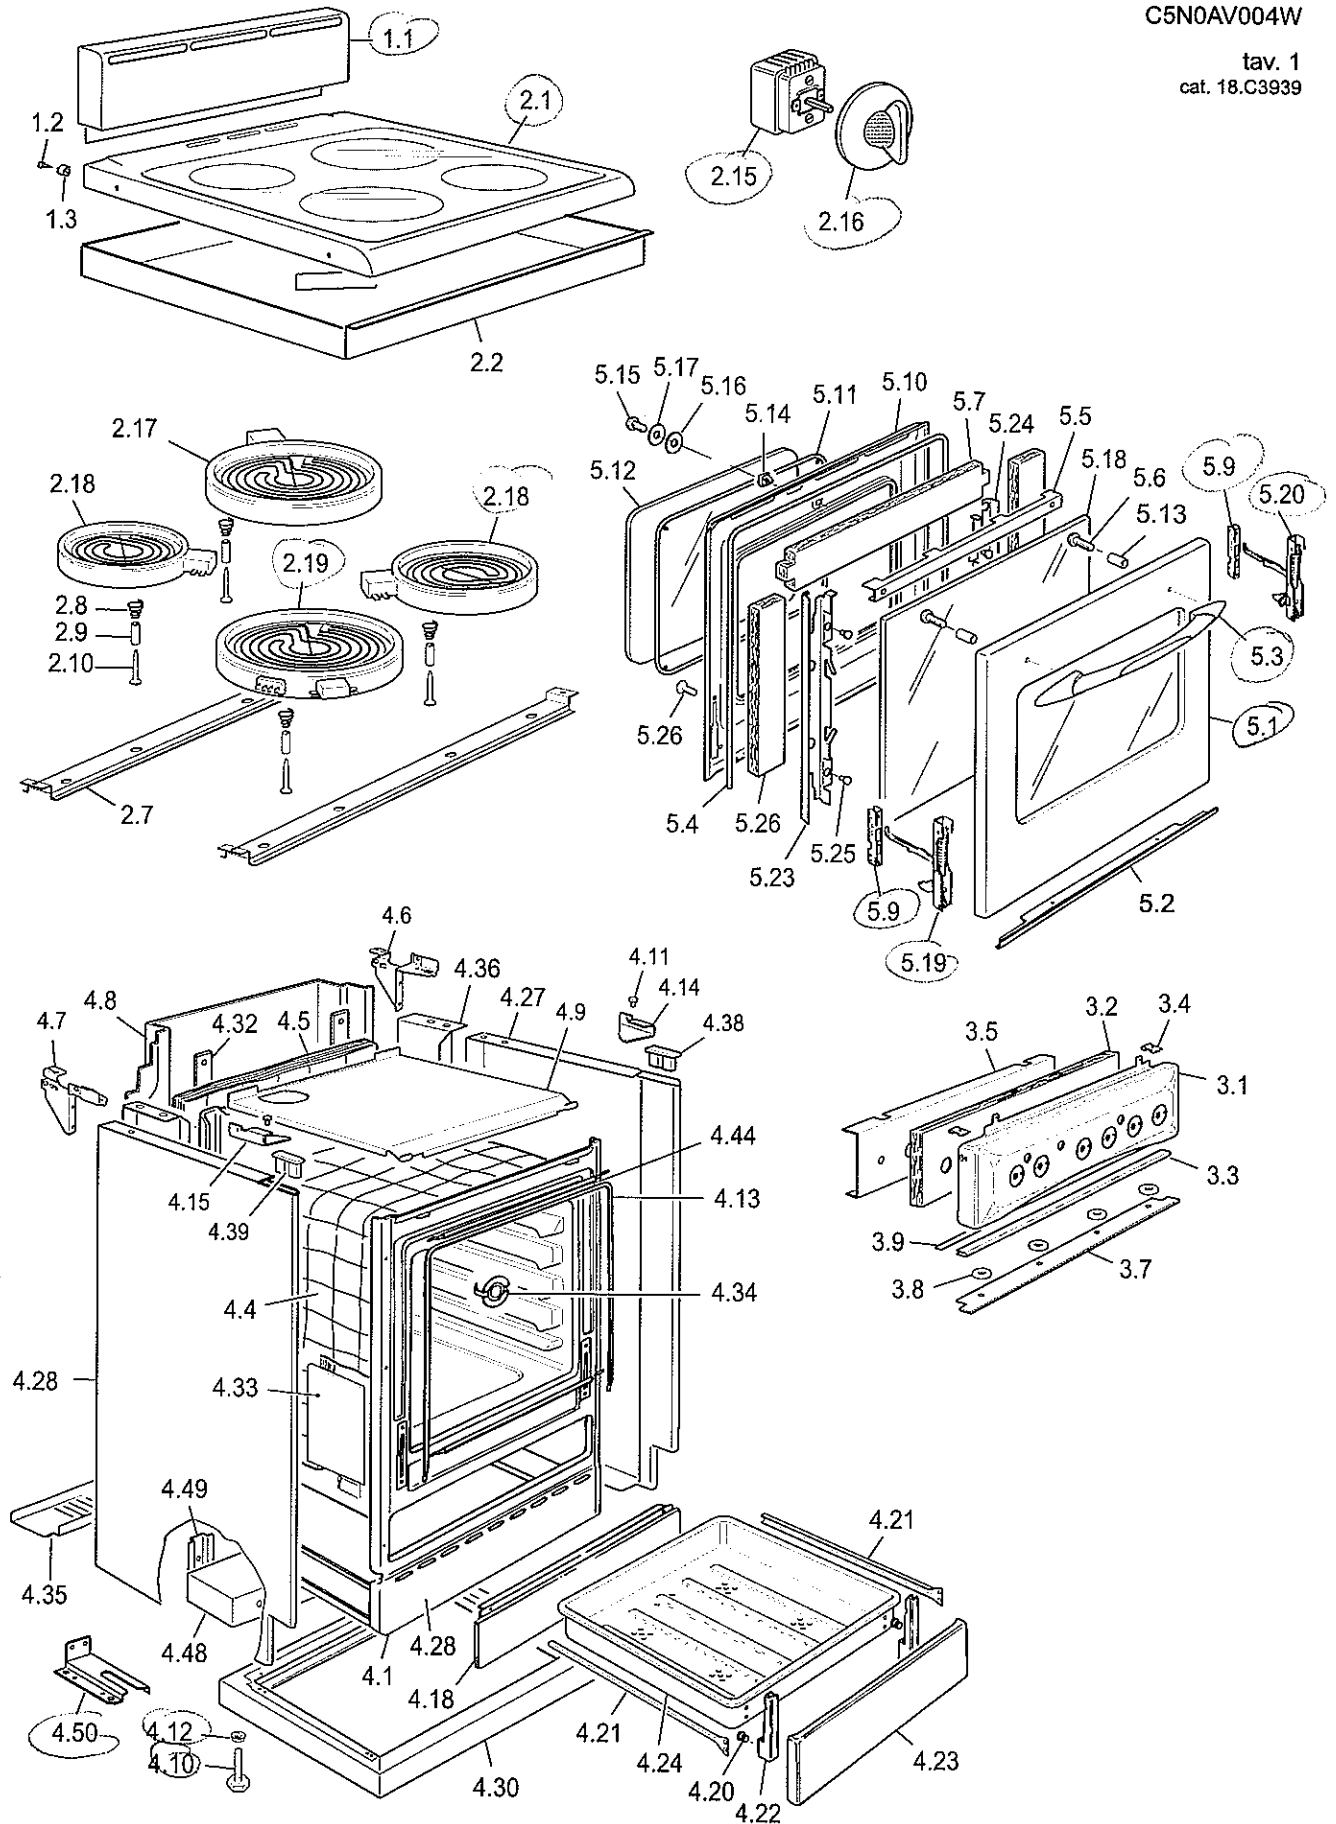

DER 200 W

C5N0AV004W

 tav. 2
cat. 18.C3939

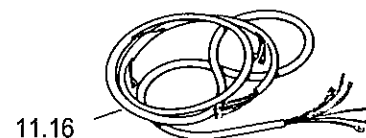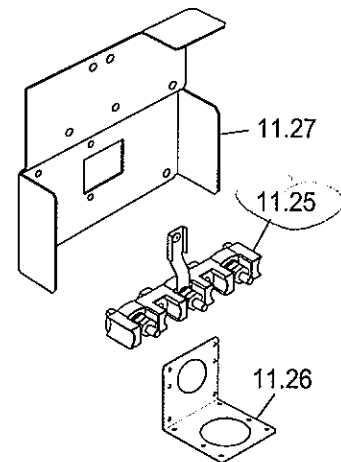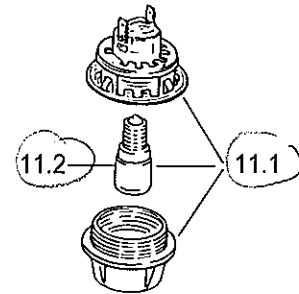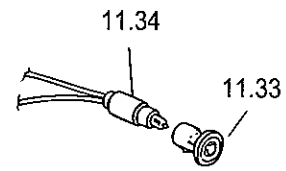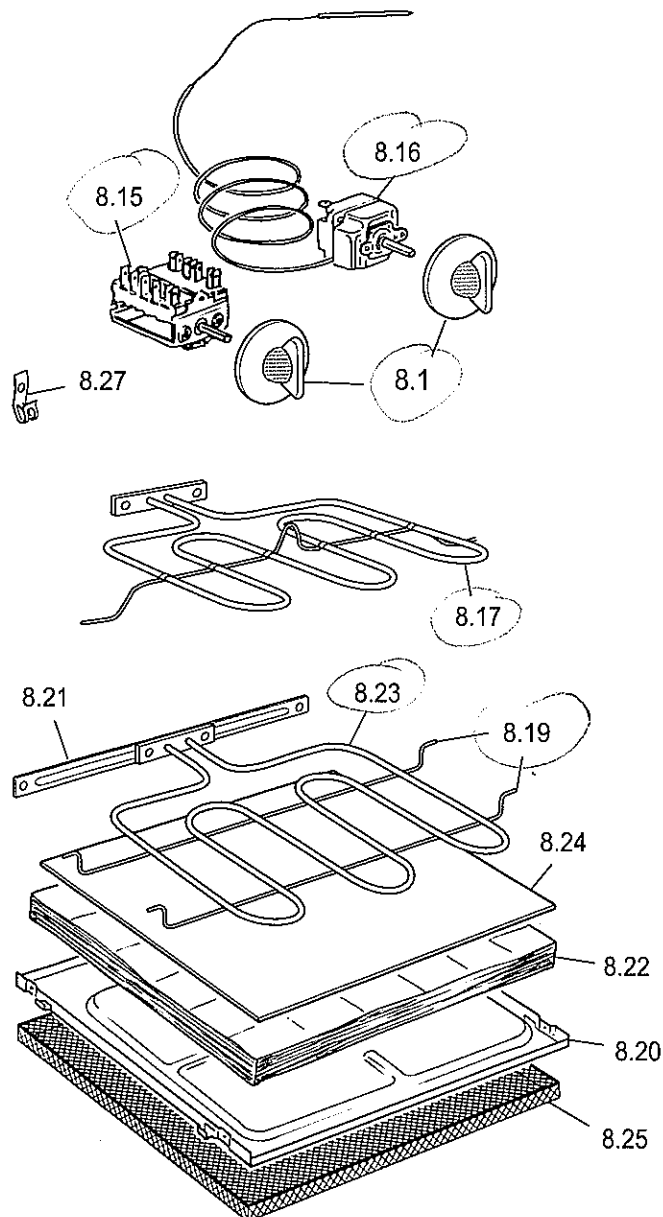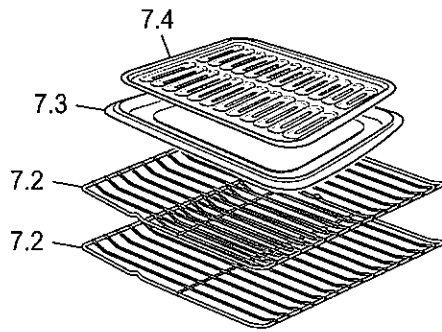

REF.	CODE	DESCRIPTION
<u>1.1</u> <u>1</u>	103934035	Rear trim
1.2	001090	Screw
1.3	040031003	Plug
<u>2.1</u> <u>1</u>	355VC5612	Glass with frame
2.2	094540	Hotplates protection
2.3	001175	Screw
2.7	51B5611.1	Hotplates support
2.8	035075	Spring
2.9	085043	Spacer
2.10	001111	Screw
<u>2.15</u> <u>G</u>	050064240	Energy regulator
<u>2.16</u> <u>G</u>	218G446410	Knob
<u>2.18</u> <u>S</u>	04777240	Hotplate - Ø 145 - 1200W
<u>2.19</u> <u>S</u>	04778240	Hotplate - Ø 180 - 1700W
3.1	35C5N081AV	Control panel
3.2	030167.1	Control panel insulation
3.3	053113	Seal
3.4	213007	Clip
3.5	4115N04	Insulation support
3.7	51B5N06H	Deflector
3.8	003066	Spacer
3.9	103916	Seal reinforcement
4.1	4505N1ES13	Oven frame
4.4	030162	Oven insulation
4.5	030168	Rear insulation
4.6	094354DX	Rear right coupler
4.7	094354SX	Rear left coupler
4.8	4115109	Rear panel
4.9	4215102Z	Upper shelter
4.10 <u>Sam</u>	4103854	Shim
4.11	040011	Buffer
4.12 <u>Sam</u>	214056	Nut shim
4.13	053066	Seal
4.14	094333DX	Front right coupler
4.15	094333SX	Front left coupler
4.18	103204035	Base panel
4.20	040012	Buffer
4.21	094171	Drawer rail
4.22	094138	Drawer fixing bracket
4.23	39E51013	Drawer front panel
4.24	39K5104Y	Drawer
4.27	36C6ND13	Right side panel
4.28	36C6NS13	Left side panel
4.30	68056004	Plinth
4.32	4215101Z	Rear insulation support
4.33	58BN601	Hinge protection
4.34	035097	Rotisserie hole plug
4.35	4215N04Z	Bottom panel
4.36	51B5606	Rear side panel bar
4.38	081083035	Right stopper
4.39	081084035	Left stopper
4.44	053074	Top/bottom seal
4.48	103326	Balance weight
4.49	213016	Balance weight bracket
4.50 <u>Sam</u>	094495	Anti-tip stability device

REF.	CODE	DESCRIPTION
<u>5.1</u> <u>1</u>	0312451	Door glass
5.2	083211035	Lower door trim
<u>5.3</u> <u>2</u>	037211035	Door handle
5.4	053115	Door seal
5.5	51B5N05	Handle bar
5.6	001183	Screw
5.7	030169.1	Top insulation door
<u>5.9</u> <u>4</u>	063057	Door hinge female
5.10	373F5106K	Door panel
5.11	053085	Gasket
5.12	031999.1TH	Inner glass
5.13	085095	Door handle sleeve
5.14	214021	Nut
5.15	001214	Screw
5.16	003035	Washer
5.17	103205	Washer
5.18	0312444	Third glass
<u>5.19</u> <u>4</u>	063095	Left door hinge (male)
<u>5.20</u> <u>4</u>	063094	Right door hinge (male)
5.23	51B5N04	Left inner glass support
5.24	51B5N03	Right inner glass support
5.25	040056	Third glass rubber
5.26	030170.1	Side insulation door

REF.	CODE	DESCRIPTION
7.2 <i>Some</i>	217622	Oven shelf
7.3 <i>S</i>	48B6105K	Broiling pan tray
7.4	48E6104K	Pastry plate
8.1 <i>G</i>	218G446410	Oven knob
8.15 <i>G</i>	050040.1	Oven switch
8.16 <i>G</i>	066141	Oven thermostat
8.17 <i>S</i>	062123001	Grill element - 240V
8.19 <i>S</i>	103203	Bottom element bar
8.20	4215102Z.1	Bottom element support
8.21	51B5103	Bottom element fixing bar
8.22	030061.1	Bottom element insulation
8.23 <i>10</i>	062122001	Bottom element - 240V
8.24	4215N05Z	Bottom element plate
8.25	4215N03Z	Bottom protection plate
8.27	213025	Clip
11.1 <i>Some</i>	072005	Lamp holder
11.2 <i>S</i>	073013001	Lamp
11.15	094221	Earth pate
11.16	1131558	Wiring
11.25 <i>S</i>	051064	Terminal block
11.26	094539	Power cord bracket
11.27	094544	Terminal block support
11.30 <i>10</i>	066057	Cut-off thermostat - 140°
11.33 <i>S</i>	07306202.2	Control lamp cover - Red
11.34 <i>S</i>	073071	Control lamp L 750
=	073067	Control lamp L 230
-	1102690	Users operating instructions
-	1102691	Installation instructions