


DER 201 BS

C5N0AV002X









tav. 1
cat. 18.C3922

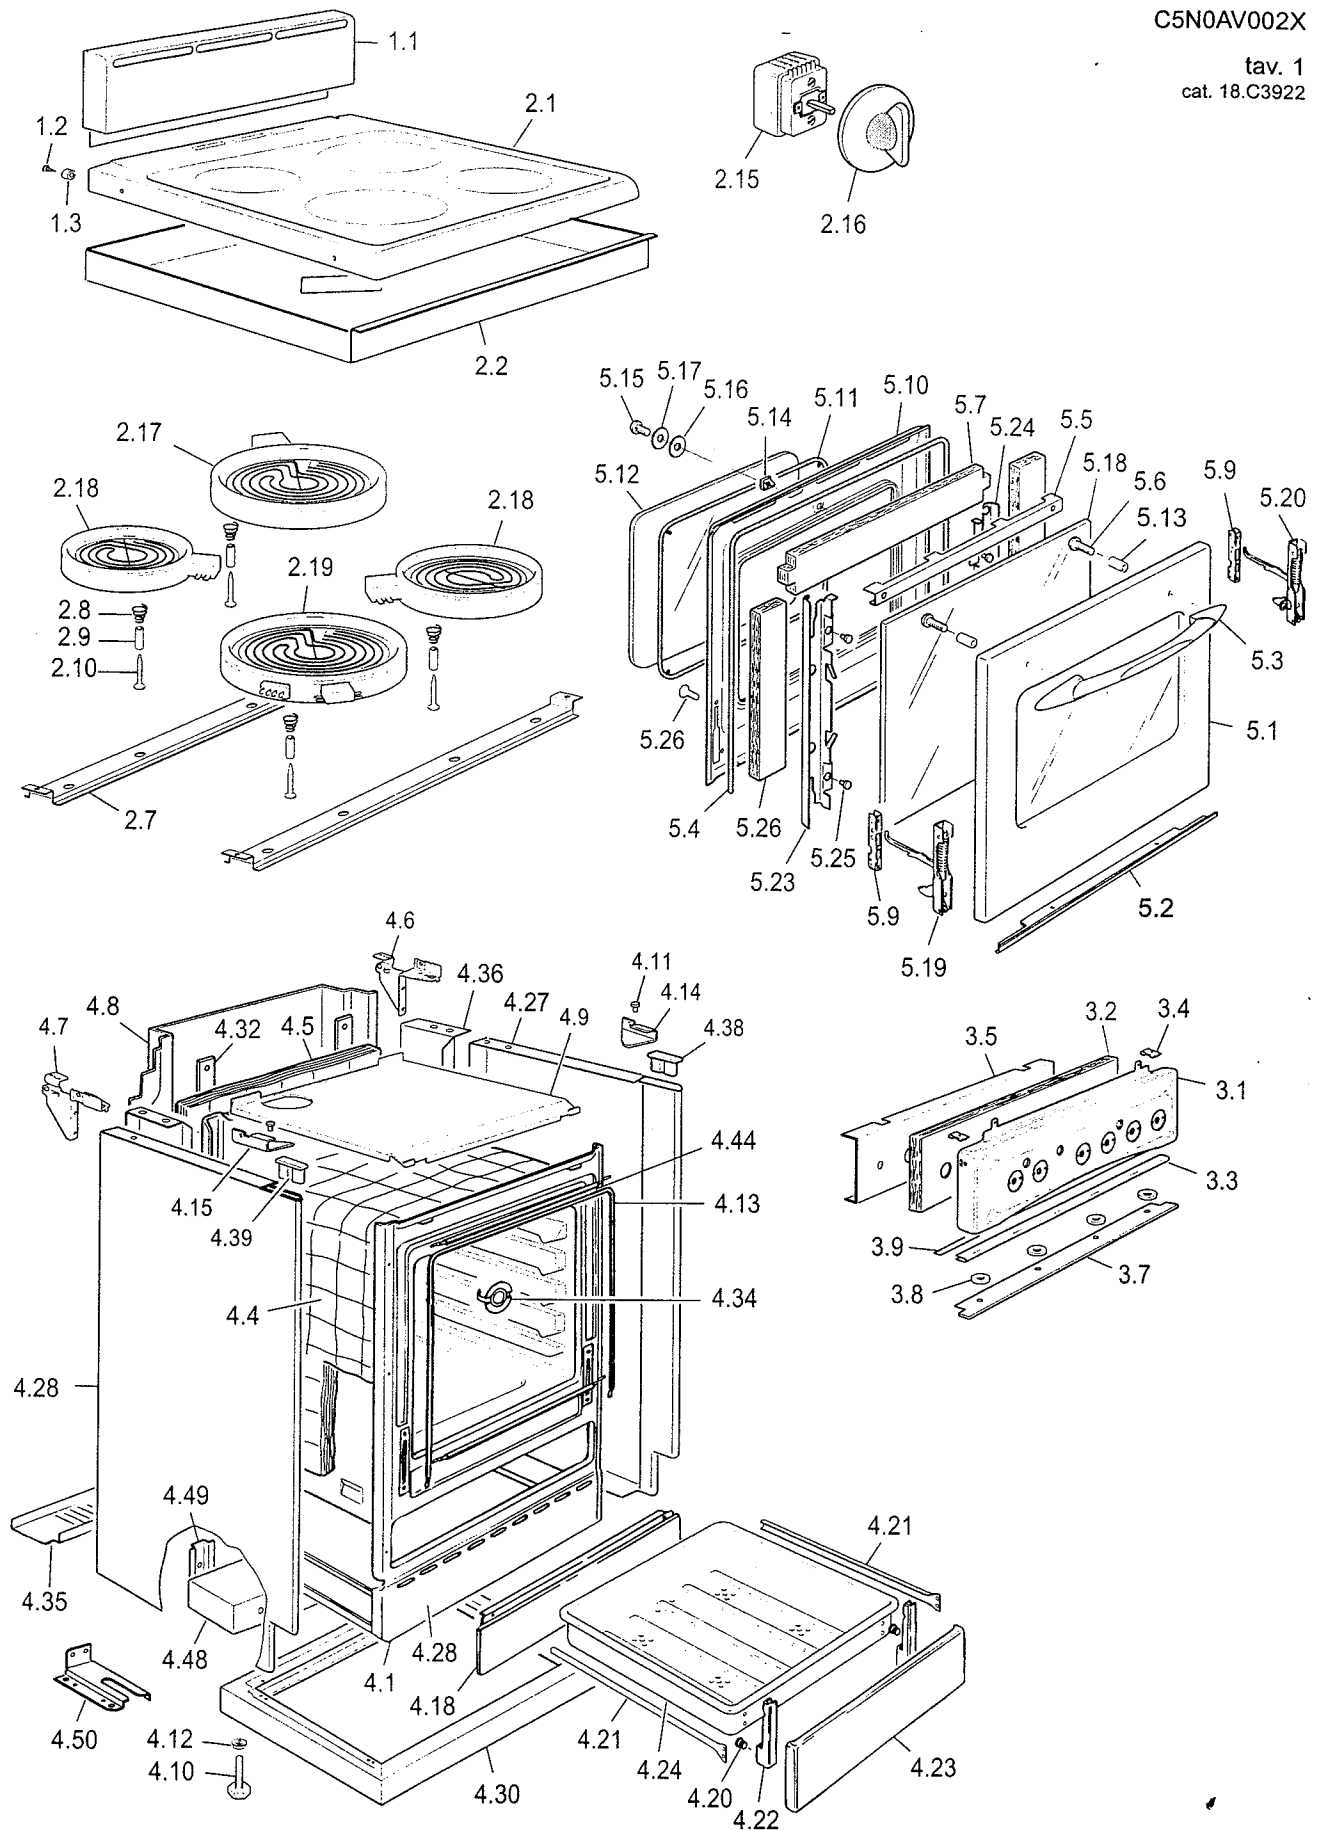

DER 201 BS

C5N0AV002X

tav. 2
cat. 18.C3922

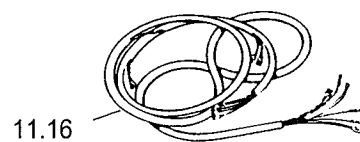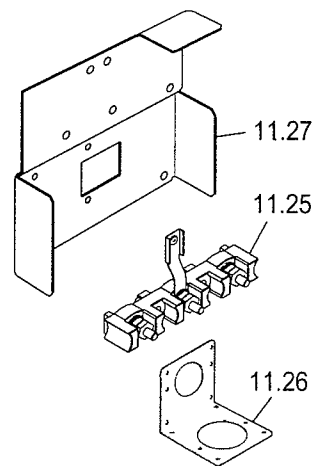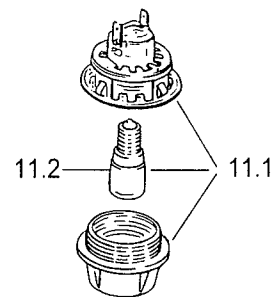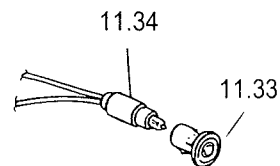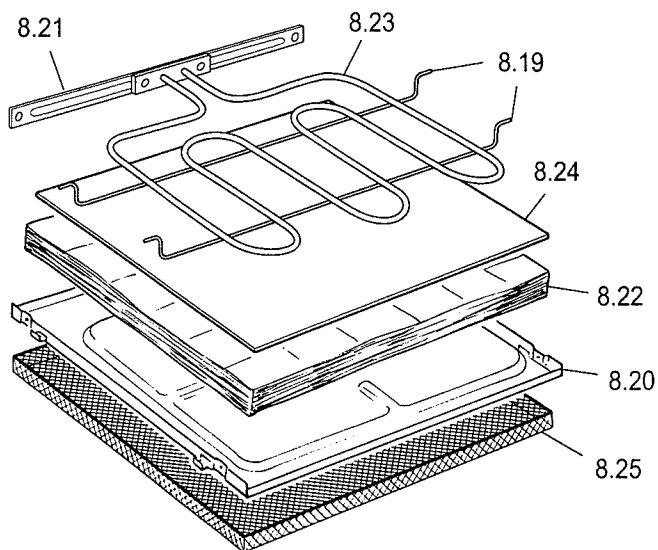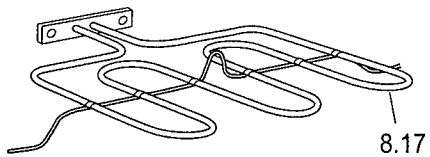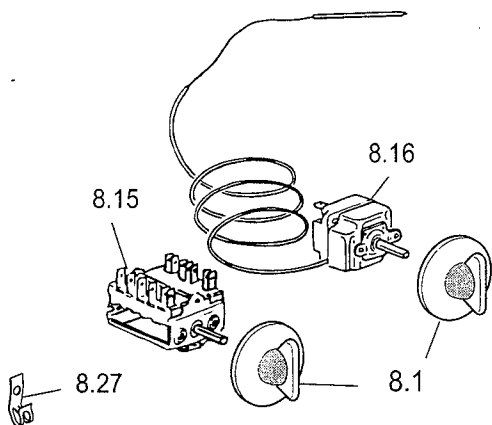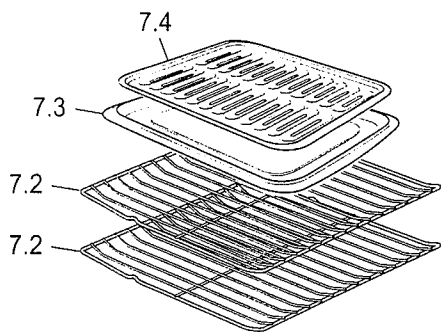

REF.	CODE	DESCRIPTION	REF.	CODE	DESCRIPTION
1.1	103910061	Rear trim	5.1	0312433	Door glass
1.2	001130	Screw	5.2	083211081	Lower door trim
1.3	040031002	Plug	5.3	037211080	Door handle
2.1	355VC5611	Glass with frame	5.4	053115	Door seal
2.2	094540	Hotplates protection	5.5	51B5N05	Handle bar
2.3	001175	Screw	5.6	001183	Screw
2.7	51B5611.1	Hotplates support	5.7	030169.1	Top insulation door
2.8	035075	Spring	5.9	063057	Door hinge female
2.9	085043	Spacer	5.10	373F5106K	Door panel
2.10	001111	Screw	5.11	053085	Gasket
2.15	050064240	Energy regulator	5.12	031999.1TH	Inner glass
2.16	2183442410	Knob	5.13	085095	Door handle sleeve
2.18	04777240	Hotplate - Ø 145 - 1200W	5.14	214021	Nut
2.19	04778240	Hotplate - Ø 180 - 1700W	5.15	001214	Screw
3.1	35C5N08SAV	Control panel	5.16	003035	Washer
3.2	030167.1	Control panel insulation	5.17	103205	Washer
3.3	053113	Seal	5.18	0312444	Third glass
3.4	213007	Clip	5.19	063095	Left door hinge (male)
3.5	4115N04	Insulation support	5.20	063094	Right door hinge (male)
3.7	51B5N06H	Deflector	5.23	51B5N04	Left inner glass support
3.8	003066	Spacer	5.24	51B5N03	Right inner glass support
3.9	103916	Seal reinforcement	5.25	040056	Third glass rubber
4.1	4505N1ES13	Oven frame	5.26	030170.1	Side insulation door
4.4	030162	Oven insulation			
4.5	030168	Rear insulation			
4.6	094354DX	Rear right coupler			
4.7	094354SX	Rear left coupler			
4.8	4115109	Rear panel			
4.9	4215102Z	Upper shelter			
4.10	103854	Shim			
4.11	040011	Buffer			
4.12	214056	Nut shim			
4.13	053066	Seal			
4.14	094333DX	Front right coupler			
4.15	094333SX	Front left coupler			
4.18	103204081	Base panel			
4.20	040012	Buffer			
4.21	094171	Drawer rail			
4.22	094138	Drawer fixing bracket			
4.23	39E5101S	Drawer front panel			
4.24	39K5104Y	Drawer			
4.27	36C6ND1HH	Right side panel			
4.28	36C6NS1HH	Left side panel			
4.30	68056004	Plinth			
4.32	4215101Z	Rear insulation support			
4.34	035097	Rotisserie hole plug			
4.35	4215N04Z	Bottom panel			
4.36	51B5606	Rear side panel bar			
4.38	081083080	Right stopper			
4.39	081084080	Left stopper			
4.44	053074	Top/bottom seal			
4.48	103326	Balance weight			
4.49	213016	Balance weight bracket			
4.50	094495	Anti-tip stability device			

REF.	CODE	DESCRIPTION
7.2	217622	Oven shelf
7.3	48B6105K	Broiling pan tray
7.4	48E6104K	Pastry plate
8.1	2183442410	Oven knob
8.15	050040.1	Oven switch
8.16	066141	Oven thermostat
8.17	062123001	Grill element - 240V
8.19	103203	Bottom element bar
8.20	4215102Z.1	Bottom element support
8.21	51B5103	Bottom element fixing bar
8.22	030061.1	Bottom element insulation
8.23	062122001	Bottom element - 240V
8.24	4215N05Z	Bottom element plate
8.25	4215N03Z	Bottom protection plate
8.27	213025	Clip
11.1	072005	Lamp holder
11.2	073013001	Lamp
11.16	1131558	Wiring
11.25	051064	Terminal block
11.26	094539	Power cord bracket
11.27	094544	Terminal block support
11.30	066057	Cut-off thermostat - 140°
11.33	07306202.2	Control lamp cover - Red
11.34	073071	Control lamp L 750
=	073067	Control lamp L 230
-	1102678	Users operating instructions
-	1102679	Installation instructions