


# DER 241 BS

C6N0AV002X

tav. 1  
cat. 18.C3901








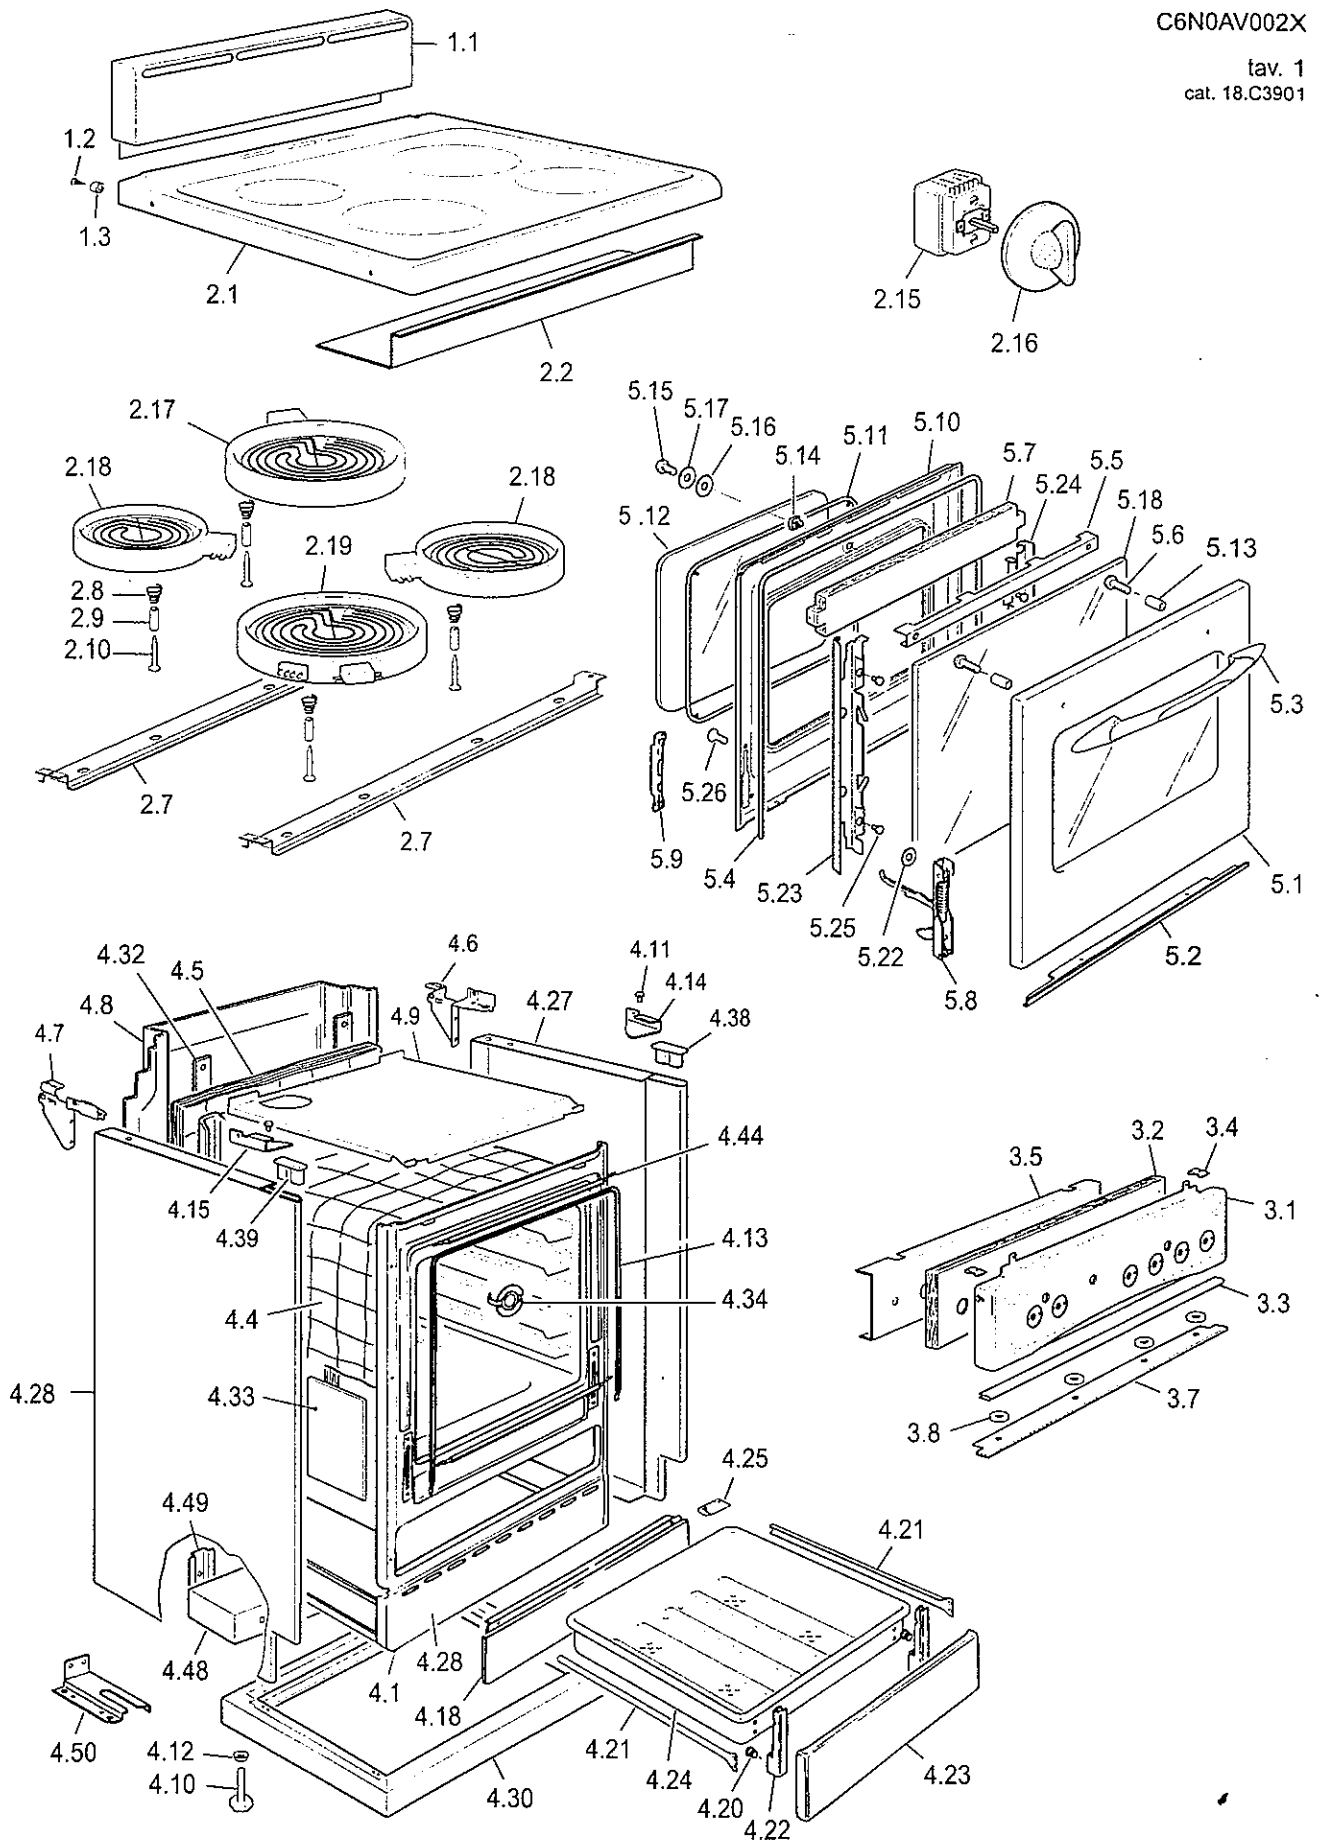


REF.	CODE	DESCRIPTION	REF.	CODE	DESCRIPTION
1.1	103908061	Rear trim	5.1	0312432	Door glass
1.2	001130	Screw	5.2	083262081	Lower door trim
1.3	040031002	Plug	5.3	037211080	Door handle
2.1	355VC6133	Glass with frame	5.4	053112	Door seal
2.2	094507	Hotplates protection	5.5	51B6119	Handle bar
2.3	001175	Screw	5.6	001183	Screw
2.7	51B6113.1	Hotplates support	5.7	030163.1	Door insulation
2.8	035075	Spring	5.8	063096	Door hinge male
2.9	085043	Spacer	5.9	063066	Door hinge female
2.10	001111	Screw	5.10	373FF704K	Door panel
2.15	050064240	Energy regulator	5.11	053084	Gasket
2.16	2183442410	Knob	5.12	0311000.1T	Inner glass
2.18	04777240	Hotplate - Ø 145 - 1200W	5.13	085095	Door handle sleeve
2.19	04778240	Hotplate - Ø 180 - 1700W	5.14	214021	Nut
3.1	35C6N32SAV	Control panel	5.15	001214	Screw
3.2	030165.1	Control panel insulation	5.16	003035	Washer
3.3	053111	Seal	5.17	103205	Washer
3.4	213007	Clip	5.18	0312439	Third glass
3.5	4116N07	Insulation support	5.23	51BFG03	Right inner glass support
3.7	51B6N02H	Deflector	5.24	51BFG02	Left inner glass support
3.8	003066	Spacer	5.25	040056	Third glass rubber
4.1	4506N1ES15	Oven body	5.26	001253	Screw
4.4	030159	Oven insulation			
4.5	030160	Rear insulation			
4.6	094354DX	Rear right coupler			
4.7	094354SX	Rear left coupler			
4.8	4116N08	Rear panel			
4.9	4216101Z	Upper shelter			
4.10	103854	Shim			
4.11	040011	Buffer			
4.12	214056	Nut shim			
4.13	053039	Seal			
4.14	094333DX	Front right coupler			
4.15	094333SX	Front left coupler			
4.18	103160081	Base panel			
4.20	040012	Buffer			
4.21	094075	Drawer rail			
4.22	094138	Drawer fixing bracket			
4.23	39E6601S	Drawer front panel			
4.24	39K6101Y	Drawer			
4.25	081073	Drawer stopper			
4.27	36C6ND1HH	Right side panel			
4.28	36C6NS1HH	Left side panel			
4.30	68061010	Plinth			
4.32	4219604Z	Rear insulation support			
4.33	58BN601	Hinge protection			
4.34	053097	Rotisserie hole plug			
4.38	081083080	Right front trim plug			
4.39	081084080	Left front trim plug			
4.44	053074	Top/bottom seal			
4.48	103326	Balance weight			
4.49	213016	Balance weight bracket			
4.50	094495	Anti-tip stability device			

# DER 241 BS

C6N0AV002X

tav. 2  
cat. 18.C3901

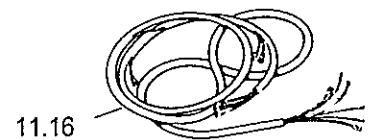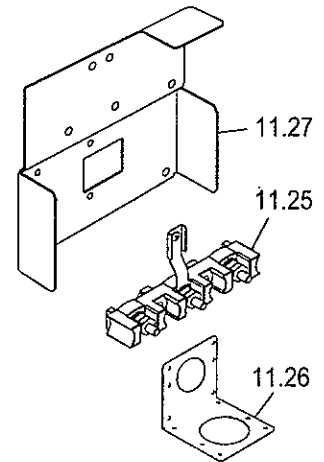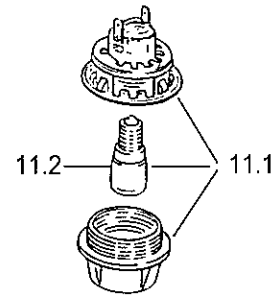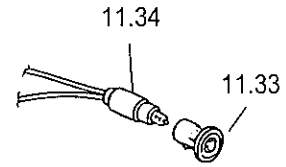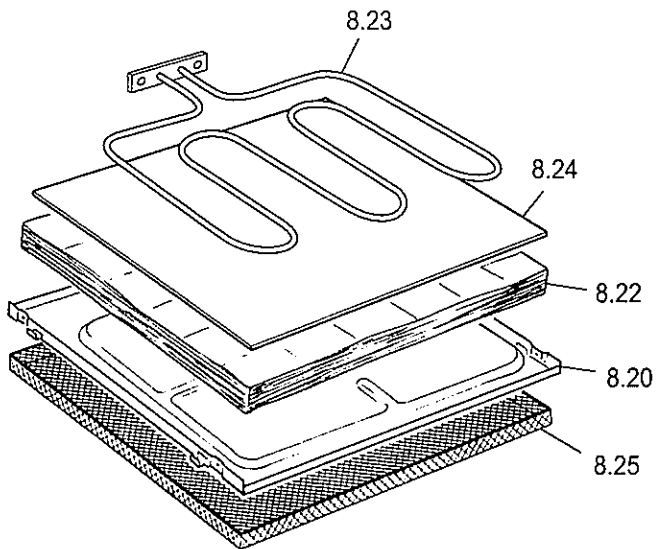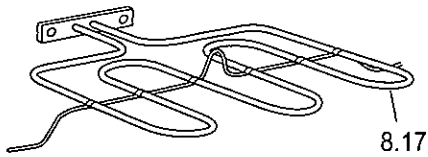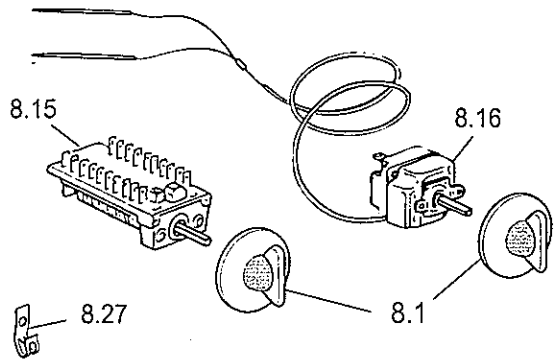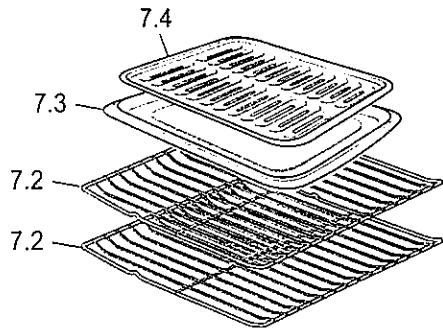

REF.	CODE	DESCRIPTION
7.2	217623	Oven shelf
7.3	48B6105K	Broiling pan tray
7.4	48E6104K	Pastry plate
8.1	2183442410	Oven knob
8.15	050040.1	Oven switch
8.16	066072	Oven thermostat
8.17	062120001	Grill element - 240V
8.20	4216102Z	Bottom element support
8.22	030083.1	Bottom element insulation
8.23	062121001	Bottom element - 240V
8.24	4216108Z	Bottom element plate
8.25	4216N02Z.1	Bottom protection plate
8.27	213023	Clip
11.1	072005	Lamp holder
11.2	073013001	Lamp
11.16	1131556	Wiring
11.25	051064	Terminal block
11.26	094539	Power cord bracket
11.27	094538	Terminal block support
11.30	066057	Cut-off thermostat
11.33	07306202.2	Control lamp cover - Red
11.34	073071	Control lamp L 750
=	073067	Control lamp L 230
-	1102667	Users operating instructions
-	1102668	Installation instructions