



## ER2402CSS

No.	Name	Qty.	No.	Name	Qty.	No.	Name	Qty.
1	Back plate of Backsplash	1	38	Door Side insulation	2	75	Right Panel Trim	1
2	Backsplash	1	39	Door Upper Insulation	1	76	Right Side plate	1
3	Positioning Bolt	2	40	Door Glass	1	77	Conduit Bracket	1
4	Right Console	1	41	Handle bracket	4	78	Balance Block	1
5	Left Console	1	42	Door Handle	1	79	Oven Enclosure Insulation	1
6	Terminal	1	43	Door Lower Strip	1	80	Rear Oven Insulation	1
7	Inner Back Plate	1	44	Door Hinge (Male)	2	81	Terminal Access Plate	1
8	Funnel	1	45	Middle Inner Glass	1	82	Outer Back Plate	1
9	Bake Heater	1	46	Glass Left Side Support	1			
10	Lamp Holder	1	47	Fixing Base	2			
11	Lamp	1	48	Washer	2			
12	Lamp Cover	1	49	Glass Right Side Support	1			
13	Thermostat Clamp	1	50	Door Frame	1			
14	Metal Clip	4	51	Inner Glass Gasket	1			
15	Burner Connector	4	52	Inner Glass Fixing Washer	2			
16	Cooktop	1	53	Inner Glass	1			
17	6" Burner	3	54	Oven Seal	1			
18	8" Burner	1	55	Drawer Handle	1			
19	6" Reflector Bowl	3	56	Wire rack	1			
20	8" Reflector Bowl	1	57	Drawer Panel	1			
21	Lock Pin	2	58	Broiler Pan	1			
22	Support Bar	1	59	Control Panel	1			
23	Splash Tray	1	60	Front Plare of Drawer	1			
24	Broiler Heater	1	61	Drawer Bracket	1			
25	Power Switch	4	62	Pressing Plate	1			
26	Thermostat	1	63	Slide Block Supporter	2			
27	Timer	1	64	Drawer mounting plate	1			
28	Function Switch	1	65	Bottom plinth	1			
29	Left Side Plate	1	66	Leveling Legs	4			
30	Plate Hinge	2	67	Anti-Tip Bracket	1			
31	Plate Cushion	4	68	Partition Plate	1			
32	Left Side Panel Trim	1	69	Drawer Right Slide Block	1			
33	Indicator Light cover	2	70	Drawer Left Slide Block	1			
34	Knobs	7	71	Drawer	1			
35	Broiler Grid	1	72	Drawer Hinge (Female)	2			
36	Washer	2	73	Oven Cavity	1			
37	Door Upper Seal	1	74	Bake Heater Bracket	1			