


IM3202SS Exploded View

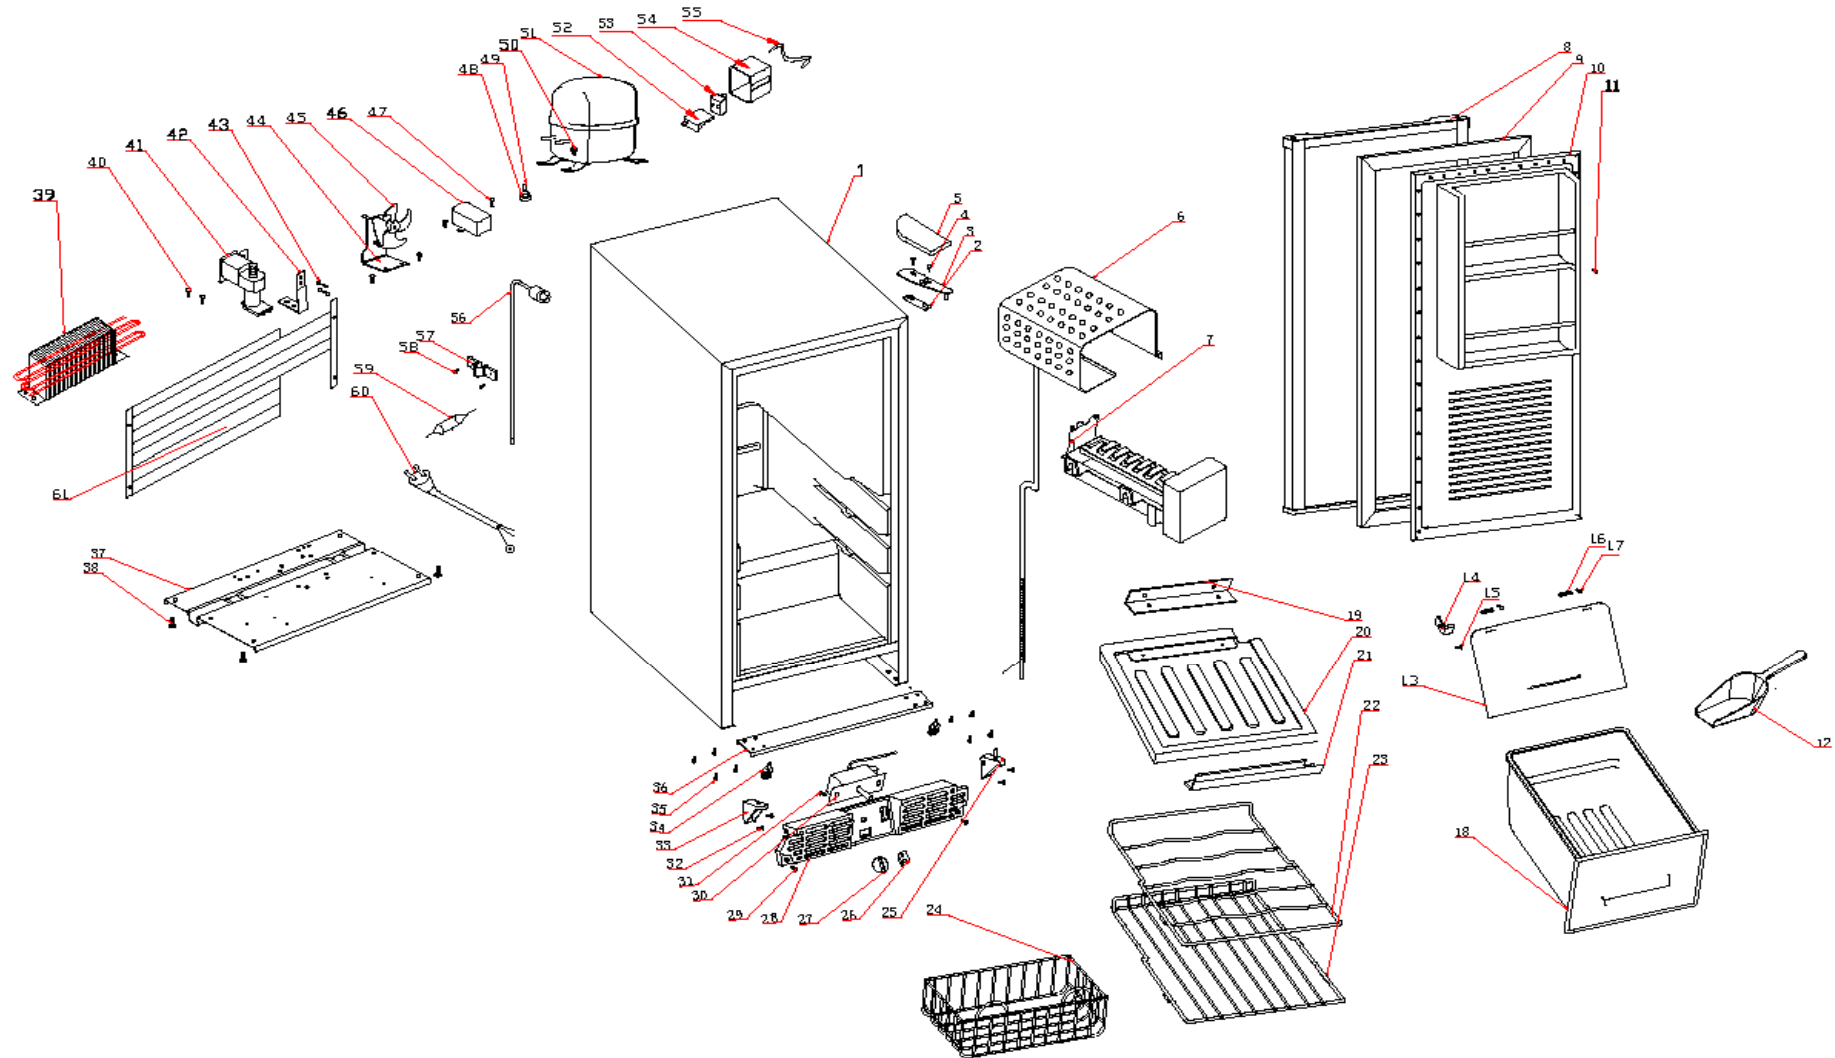

IM3202SS Parts List

No.	Parts No.	Parts Name
1	B146.0	Cabinet
2	B105.1-1	Washer
3	B105.1-2	Top Hinge
5	B105.0-1	Top Hinge Cover
6	B146.0-1	Evaporator
7	B143.0-1	Ice Maker Kit
8	B146.4	Door Assembly
9	B146.4-3	Door Gasket
10	B146.4-2	Door Liner
12	B146.5	Ice Spade
13	B146.6-0	Freezer Door
14	B159.0-15	Magnet
16	B159.0-13	Freezer Door Hang
18	B146.6-1	Ice Box
19	B146.6-2	Board Support
20	B146.6-3	Foaming board
21	B146.6-4	Board Support Quickse
22	B145.0-1	Wire Shelf (bend)
23	B146.0-2	Wire Shelf (straight)
24	B145.0-4	Fruit Basket
25	B145.3-2	Right Bottom Hinge
26	B143.0-16	Power Switch
27	B101.0-1	Thermostat Knob
28	B145.1-1	Control covering
30	B145.2-5	Thermostat
33	B145.3-1	Left Bottom Hinge
34	B145.9	Adjustable Foot
36	B145.0-2	Front Cabinet Base
37	B145.0-3	Compressor Base
39	B146.7-1	Condenser
41	B143.0-2	Water Valve
42	B143.0-3	Water Valve Support
44	B145.4-1	Electromotor Support
45	B146.8	Fan&Motor
46	B107.0-2	Thermostat enclosure
48	B143.1.7	Rubber Washer (Compress
49	B143.1.6	Tube
50	B143.1.5	Bolt
51	B143.1.0	Compressor
52	B143.1.2	PTC Starter
53	B143.1.1	Overload Protector
54	B143.1.3	Wire Cover (Compressor
55	B143.1.4	Relay Band
56	B143.0-11	Water Pipe
57	B143.0-21	Water Pipe Clip
59	B145.15	Drier
60	B145.12	Power Supply Cord
61	B146.0-7	Safety Guard