

## MODEL MKB42B SPARE PART LIST

EXPLODED VIEW	NO.	NAME
	1	handle
	2	handle block
	3	door pivot
	4	lower door lath
	5	upper door lath
	6	glass door
	7	thermostate knob
	8	switch knob
	9	timer knob
	10	indicator light
	11	panel
	12	door hook
	13	spring
	14	timer
	15	switch 1
	16	thermostate 1
	17	heating element
	18	/
	19	rightside plate
	20	leftside plate
	21	heating element stand
	22	rear feet
	23	foot
	24	/
	25	bottom plate
	26	puntil
	27	top plate
	28	housing
	29	back plate
	30	electrical wire bushing
	31	electrical wire
	32	baking tray
	33	wire rack
	34	/
	35	switch 2
	36	/
	37	/
	38	rotisserie fork bracket
	39	rotisserie fork
	40	rotary fork
	41	rotisserie fork screw
	42	connector of shaft
	43	motor bracket
	44	motor
	45	/

46 door pivot stand  
47 bracket  
48 fan motor  
49 motor bracket  
50 fan  
51 switch (RL2)  
52 /  
53 /  
54 /  
55 /  
56 crimp connector  
57 internal wiring  
58 locking tube  
59 locking band  
60 fuse  
61 thermostat 2  
62 stove bracket  
63 stove cover  
64 /  
65 big stove  
66 small stove



