


# OCRB43W Exploded View

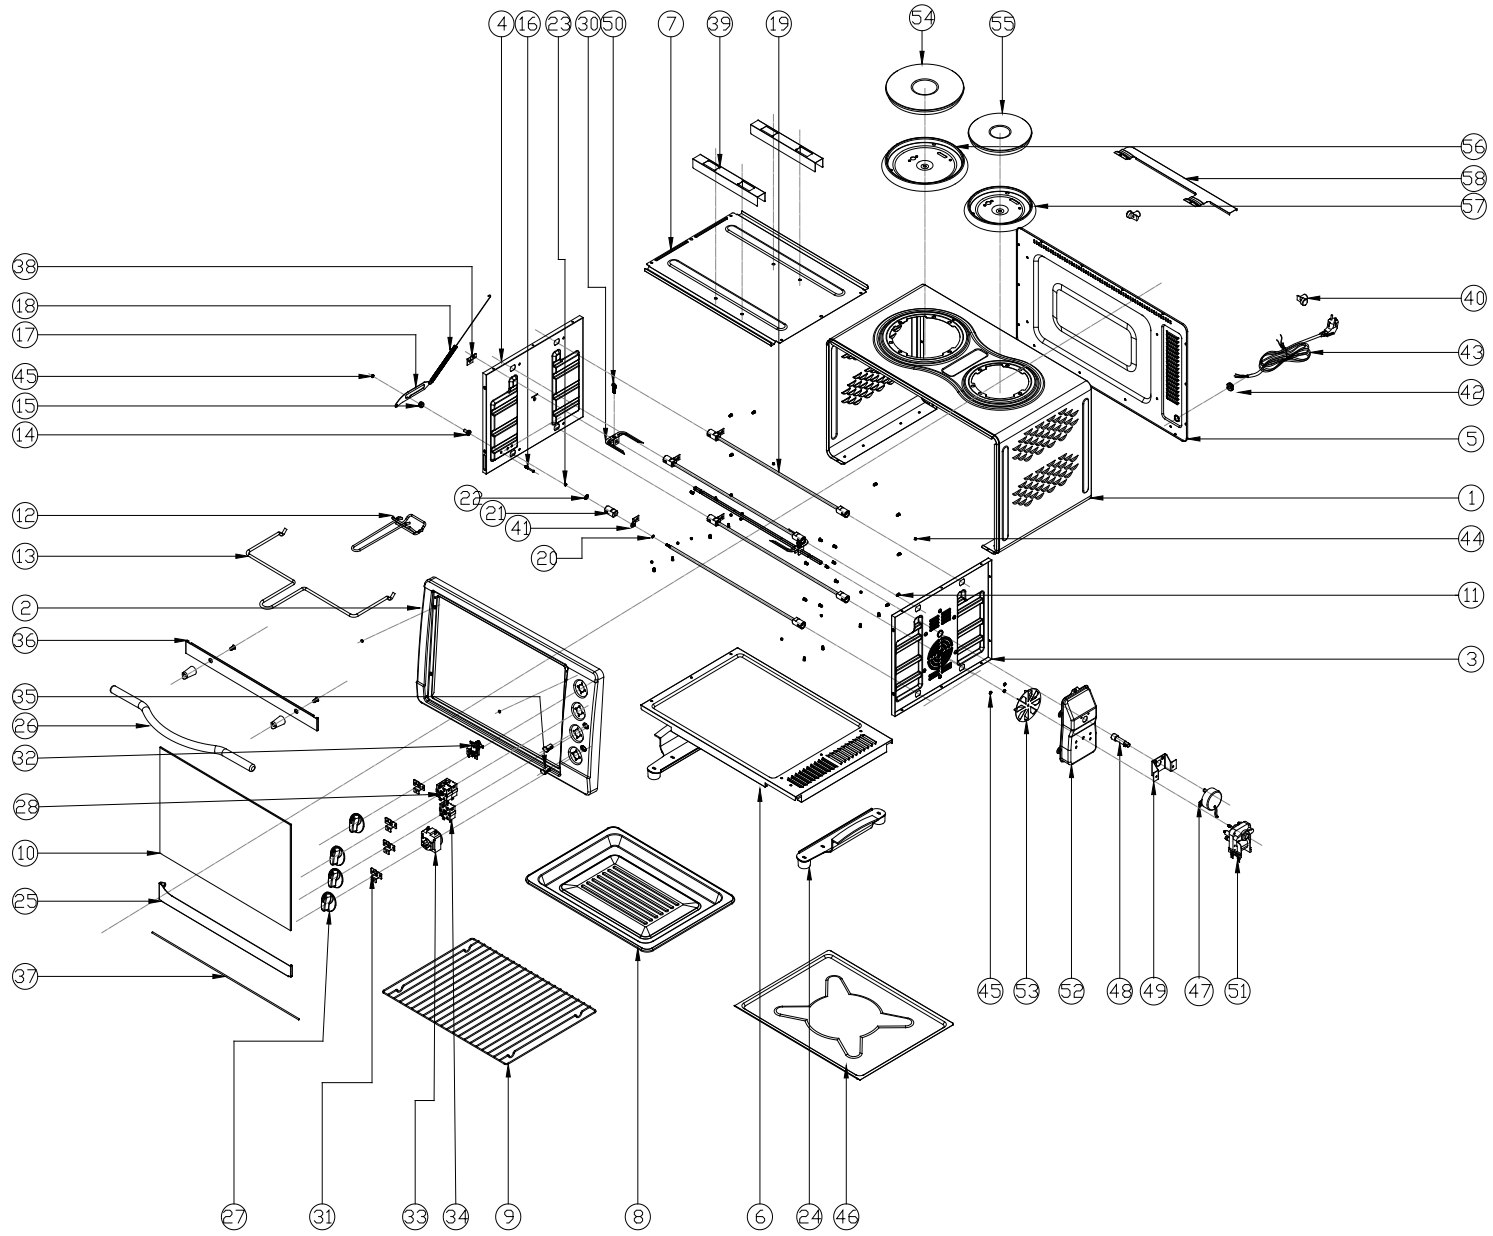

## OCRB43W Parts List

No.	Name	Q'ty	No.	Name	Q'ty	No.	Name	Q'ty	No.	Name	Q'ty
1	Enclosure	1	15	Door Slice Wheel	1	29		1	43	Power Supply Cord	1
2	Front Panel	1	16	Screw	1	30	Skewer	1	44	Rivet	21
3	Right Plate	1	17	Door Slice	1	31	Switch Supporter	3	45	Nut	3
4	Left Plate	1	18	Sping	1	32	Thermostat	1	46	Crumb Tray	1
5	Back Plate	1	19	Heating Element	4	33	Operation Control Switch	1	47	Rotary Motor	1
6	Back Plate	1	20	Washer	4	34	Timer	1	48	Connecting Shaft	1
7	Top Plate	1	21	Ceramic Supporter	8	35	Indicator	2	49	Motor Bracket	1
8	Baking Pan	1	22	Washer	8	36	Door Upper Insert	1	50	Fork Screw	1
9	Wire Rack	1	23	Nut	8	37	Door Shaft	1	51	Fan Motor	1
10	Glass Door	1	24	Leg	2	38	Bracket	1	52	Fan Duct	1
11	Screw	26	25	Door Lower Insert	1	39	Enforced Plate	2	53	Fan	1
12	Metal Handling Tool	1	26	Handle	1	40	Stopper	2	54	Large Burner	1
13	Metal Skewer Handling Tool	1	27	Knob	4	41	Earthing Plate	4	55	Small Burner	1
14	Door Slice Shaft	1	28	Function Control Switch	1	42	Cable Clamp	1	56	Large Burner Base	1
									57	Small Burner Base	1
									58	Cable Slot	1