 
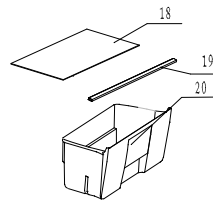 
 
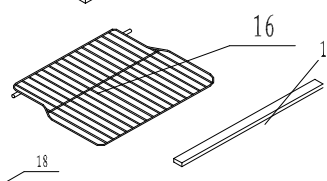 
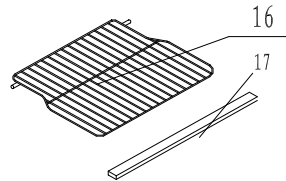 
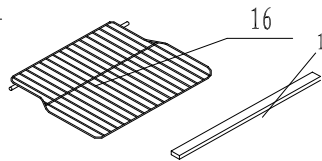 
 
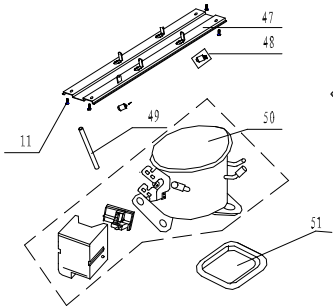 
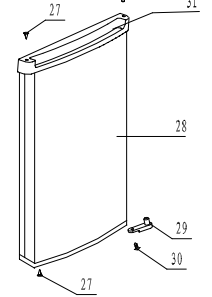 
 
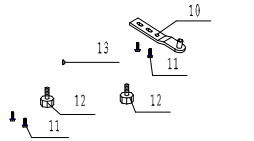 
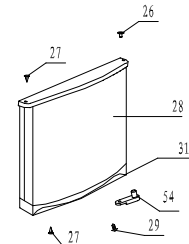 
 
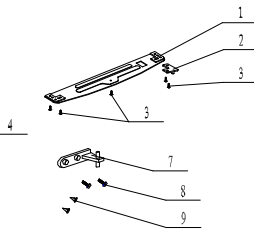 
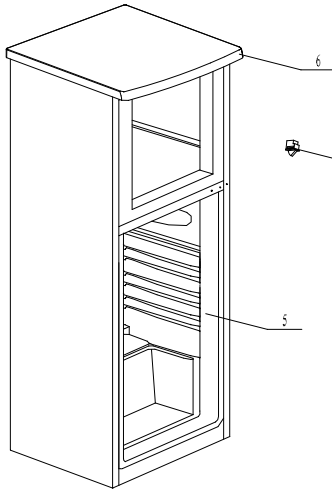 
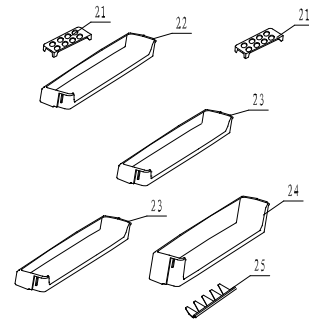 
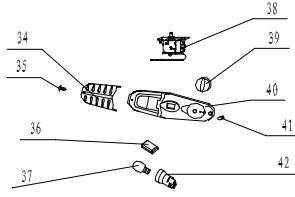 


# Technical Service Manual

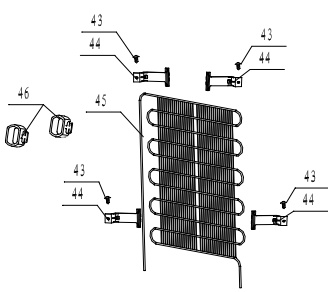

RA756WT Parts List		
NO.	PARTS NUMBER	PARTS NAME
1	C0463.1-1	TOP PLATE
2	B0333.1-2	UPPER HINGER
3	BCD-248W.1-12	SCREW
4	B9911.4.1.1	LAMP SWITCH
5	C0471.1.1	CABINET
6	C0462.1.1-1	TOP
7	B0213.1.2	MIDDLE HINGER
8	B0213.1.1-14	SCREW
9	B0117.1-3	PLUG
10	C0435.1.2	LOWER HINGER
11	B0343.1-6	BOLT
12	BCD-185E.1.6	ADJUSTABLE FOOT
13	B0213.1-8	SCREW COVER
14	C0435.5-2	WIRE SHELF
15	C0471.2.1	WIRE SHELF PROFILE
16	B0333.5-8	WIRE SHELF
17	B0105.5-8	WIRE SHELF PROFILE
18	C0435.5.1-1	CRISPER COVER
19	B0333.5-6	CRISPER COVER PROFILE
20	B0333.5-4	CRISPER
21	B0234.5-1	EGG TRAY
22	C0437.5-2	UPPER STORAGE SHELF
23	C0437.5-2	MIDDLE STORAGE SHELF
24	C0437.5-3	BOTTLE STORAGE SHELF
25	B0234.5-6	BOTTLE RETAINER
26	BCD-181C.2.1-4B	HINGE BUSH
27	B0213.2-1	HOLE COVER
28	C0471.2	FOAMED DOOR
29	B0112.2-3	STOPPER
30	GB845-85	SCREW ST4.2*13-C-H
31	B0333.2.1-1	Handle
32	C0435.2.3	DOOR GASKET
33	C0435.2.4	DOOR GASKET
34	B0172.4-2	LAMP COVER
35	GB845-85	SCREW ST2.9*16-C-H
36	B0239.1-9	THERMOSTAT HOLE COVER
37	BCD-185E.4-4	LAMP
38	C0435.4.4	THERMOSTAT
39	B0172.4-3	THERMOSTAT KNOB
40	B0172.4-1	THERMOSTAT BOX
41	B0172.4-5	HOLE COVER
42	BCD-256.4-6	LAMP SOCKET
43	B0232.3-1	SCREW
44	B0103.3-3	CONDENSOR HOLDER
45	C0439.3-1	CONDENSOR
46	B0335.5-8	SPACER
47	C0435.1-1	COMPRESSOR TRAVERSE
48	BCD-185E.1-38	ROLLER ASS.
49	Q/HBT-040	CHARGE PIPE
50		COMPRESSOR
51	B0109.3-4	WATER TRAY
52	B0175.4.4/F(3)	PLUG
53	B0351.4.3	EARTH CABLE
54	BCD-185E.2.3-2B	STOPPER