


T-18 Exploded View

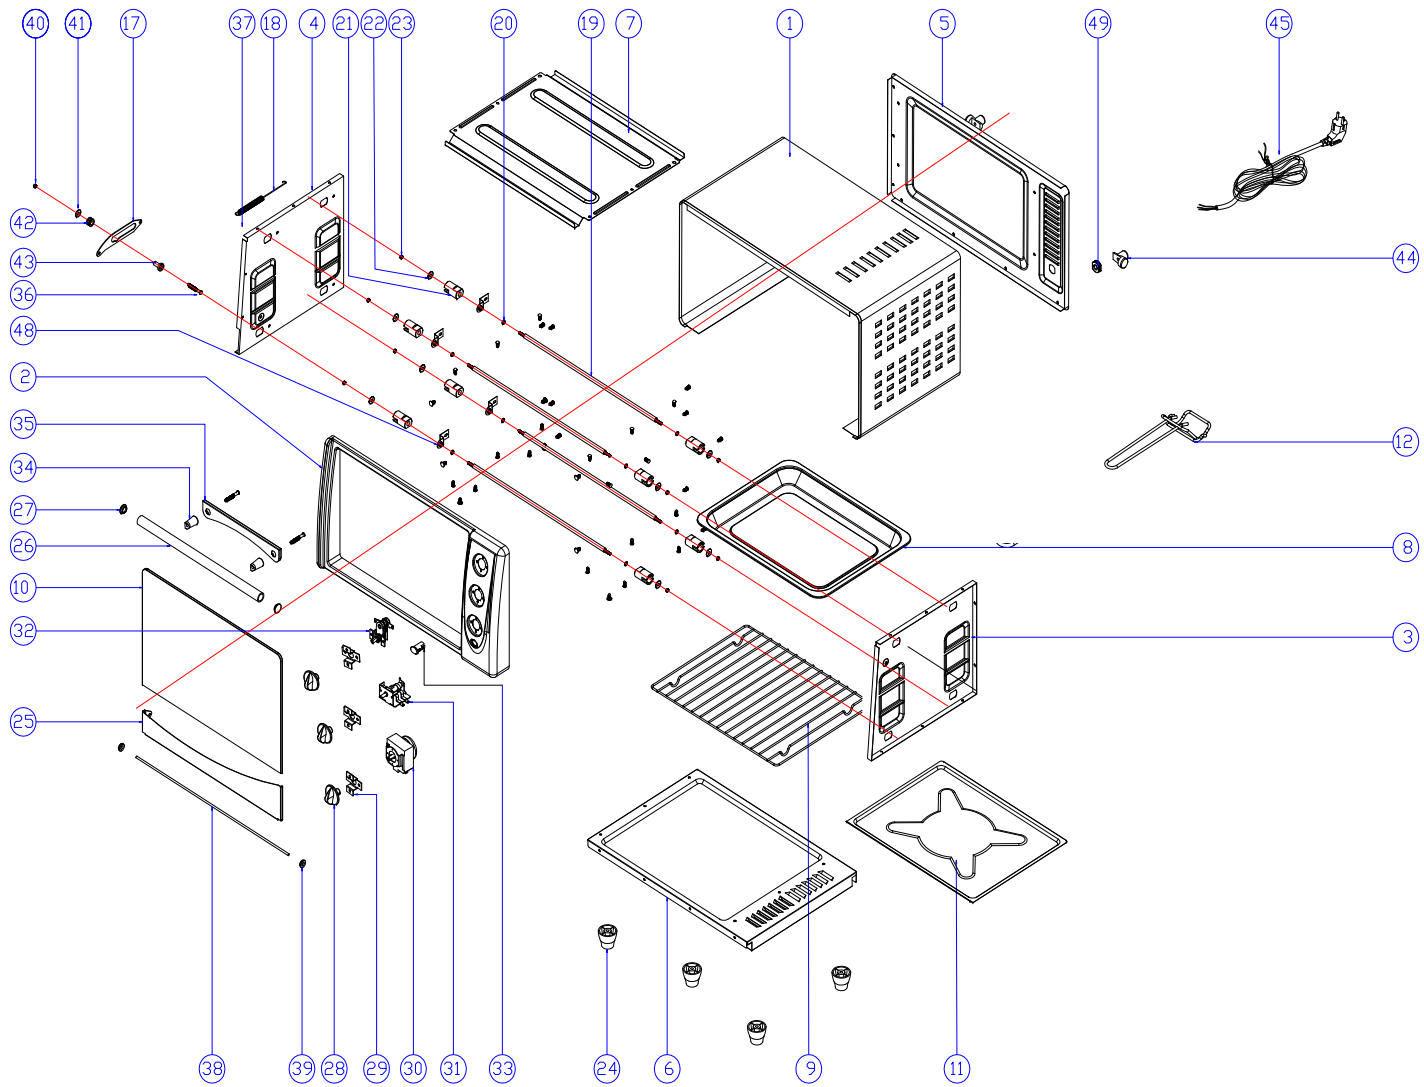

T-18 Parts List

No.	Name	Q'ty	No.	Name	Q'ty	No.	Name	Q'ty	No.	Name	Q'ty
1	Enclosure	1	15			29	Switch Supporter	3	43	Door Slice Shaft	1
2	Front Panel	1	16			30	Timer	1	44	Stopper	2
3	Right Plate	1	17	Door Slice	1	31	Function Switch	1	45	Power Supply Cord	1
4	Left Plate	1	18	Sping	1	32	Thermostat	1	46		
5	Back Plate	1	19	Heating Element	4	33	Indicator	1	47		
6	Back Plate	1	20	Washer	8	34	Handle Supporter	1	48	Earthing Plate	4
7	Top Plate	1	21	Ceramic Supporter	8	35	Door Upper Insert	2	49	Cable Clamp	1
8	Baking Pan	1	22	Washer	8	36	Screw	1			
9	Wire Rack	1	23	Nut	8	37		1			
10	Glass Door	1	24	Leg	4	38	Door Shaft	1			
11	Crumb Tray	1	25	Door Lower Insert	1	39	Door Shaft Sleeve	2			
12	Metal Handling Too	1	26	Handle	1	40	Nut	1			
13			27	Handle Cap	2	41	Washer	1			
14			28	Knob	3	42	Door Slice Wheel	1			