

TFL-11 Parts List

| No. | Description | Q'ty |
|-----|----------------------------|------|
| 1 | TOP COVER | 1 |
| 2 | BIG OVEN PLATE FIX SLICE | 1 |
| 3 | BIG OVEN PLATE | 1 |
| 4 | SMALL OVEN PLATE FIX SLICE | 1 |
| 5 | SMALL OVEN PLATE | 1 |
| 6 | LEFT SHELL | 1 |
| 7 | FRONT INNER PLATE | 1 |
| 8 | TOASTING RACK | 1 |
| 9 | BAKING TRAY | 1 |
| 10 | UPPER DOOR BRACKET | 1 |
| 11 | DOOR HANDLE SUPPORT | 1 |
| 12 | DOOR HANDLE | 1 |
| 13 | DOOR AXIS | 2 |
| 14 | OUTSIDE DOOR GLASS | 1 |
| 15 | FUNCTION KNOB | 1 |
| 16 | TEMP KNOB | 1 |
| 17 | FRONT PANEL | 1 |
| 18 | THERMOSTAT | 1 |
| 19 | LEFT INNER PLATE | 1 |
| 20 | LEFT CERAMICS BASE | 2 |
| 21 | LOWER DOOR BRACKET | 1 |
| 22 | GLASS FRAME | 1 |
| 23 | DOOR SEAL | |
| 24 | SILICON SLEEVE | 1 |
| 25 | INNER DOOR GLASS | 1 |
| 26 | INDICATOR | 1 |
| 27 | BURNER KNOB | 1 |
| 28 | INDICATOR COVER | 1 |
| 29 | FEET | 3 |
| 30 | LEFT DOOR FIX SLICE | 1 |
| 31 | RIGHT DOOR FIX SLICE | 1 |
| 32 | FUNCTION SWITCH | 1 |
| 33 | TEMP SWITCH | 1 |
| 34 | LOWER INNER PLATE | 1 |
| 35 | RIGHT CERAMICS BASE | 1 |
| 36 | UPPER HEATER | 2 |
| 37 | BULB COVER | 1 |
| 38 | LAME GLASS | 1 |
| 39 | RIGHT INNER PLATE | 1 |
| 40 | HEAT CONDUCTION SHAFT | 1 |
| 41 | INSULATION | 1 |
| 42 | BOTTOM PLATE | 1 |
| 43 | FEET BASE B | 1 |
| 44 | WIRE FIX SLICE | 1 |
| 45 | FEET BASE A | 3 |
| 46 | RIGHT SHELL | 1 |
| 47 | LAMP BASE | 1 |
| 48 | LAMP BASE SUPPORT | 1 |
| 49 | PLUG CORD | 1 |
| 50 | BULB | 1 |
| 51 | BACK INNER PLATE | 1 |
| 52 | REAR SHELL | 1 |
| 53 | REAR SHELL PROTECTOR | 1 |
| 54 | THERMOSTAT SHELL FRAGMENT | 1 |
| 55 | THERMOSTAT | 1 |
| 56 | UPPER INNER PLATE | 1 |
| 57 | INSULATION | 1 |
| 58 | UPPER COVER FIX PLATE | 1 |
| 59 | SMALL OVEN PLATE CIRCLE | 1 |
| 60 | BIG OVEN PLATE CIRCLE | 1 |