



VM183W Parts List

No.	Part Name	Part Code
1	Fill plate	C0463.1-1
2	Up hinge	B0333.1-2
3	Screw	GB845-85
4	Foamed cabinet	C0501.1.1
5	Evaporator Ass.	C0443.3.2
6	Evaporator front trim	B0335.5-3
7	Right evaporator holder	B0335.5-2
8	Left evaporator holder	B0335.5-1
9	Right flap holder	B0335.5-10
10	Screw	GB845-85
11	Left flap holder	B0335.5-9
12	Small compartment	B0335.5-7
13	Middle drawer	C0443.5.1-2
14	Low Drawer	B0335.5-6
15	Drawer front	B0335.5-4
16	Door gasket	B0335.5-4
17	Display block ass.	B0335.2-1
18	Deep freezing Switch	C0463.4.3
19	Bush	BCD-181C.2.1-4B
20	Plug	B0213.2-1
21	Foamed door	C0443.2.1
22	Stoper	BCD-185E.2.3-2B
23	Screw	GB845-85
24	Screw	GB845-85
25	Thermostat box	B0324.4-2
26	Thermostat	B0324.4.2
27	Thermostat knob	B0324.1-3
28	Control panel	C0501.4.1
29	Screw	GB845-85
30	Condensor holder	B0333.3-1
31	Condensor	C0443.3-2
32	Spacer	B0335.5-8
33	Compressor plate	C0435.1-1
34	Roller	BCD-185E.1-38
35	Screw	GB845-85
36	Connect pipe	Q/HBT-040 A
37	Compressor ass.	AE1340YHUR

38	Supply cord	C0435.4.2▼A1
39	Earthing cable	BCD-192.4.4
40	Low hinge	C0435.1.2
41	Screw	GB845-85
42	Plug	B0213.1-8
43	Leveling leg	BCD-185E.1.6
44	PTC Relay	
45	Overload Protector	