


Explosion View of VM319W

BD-86 EXPLORING DRAWING

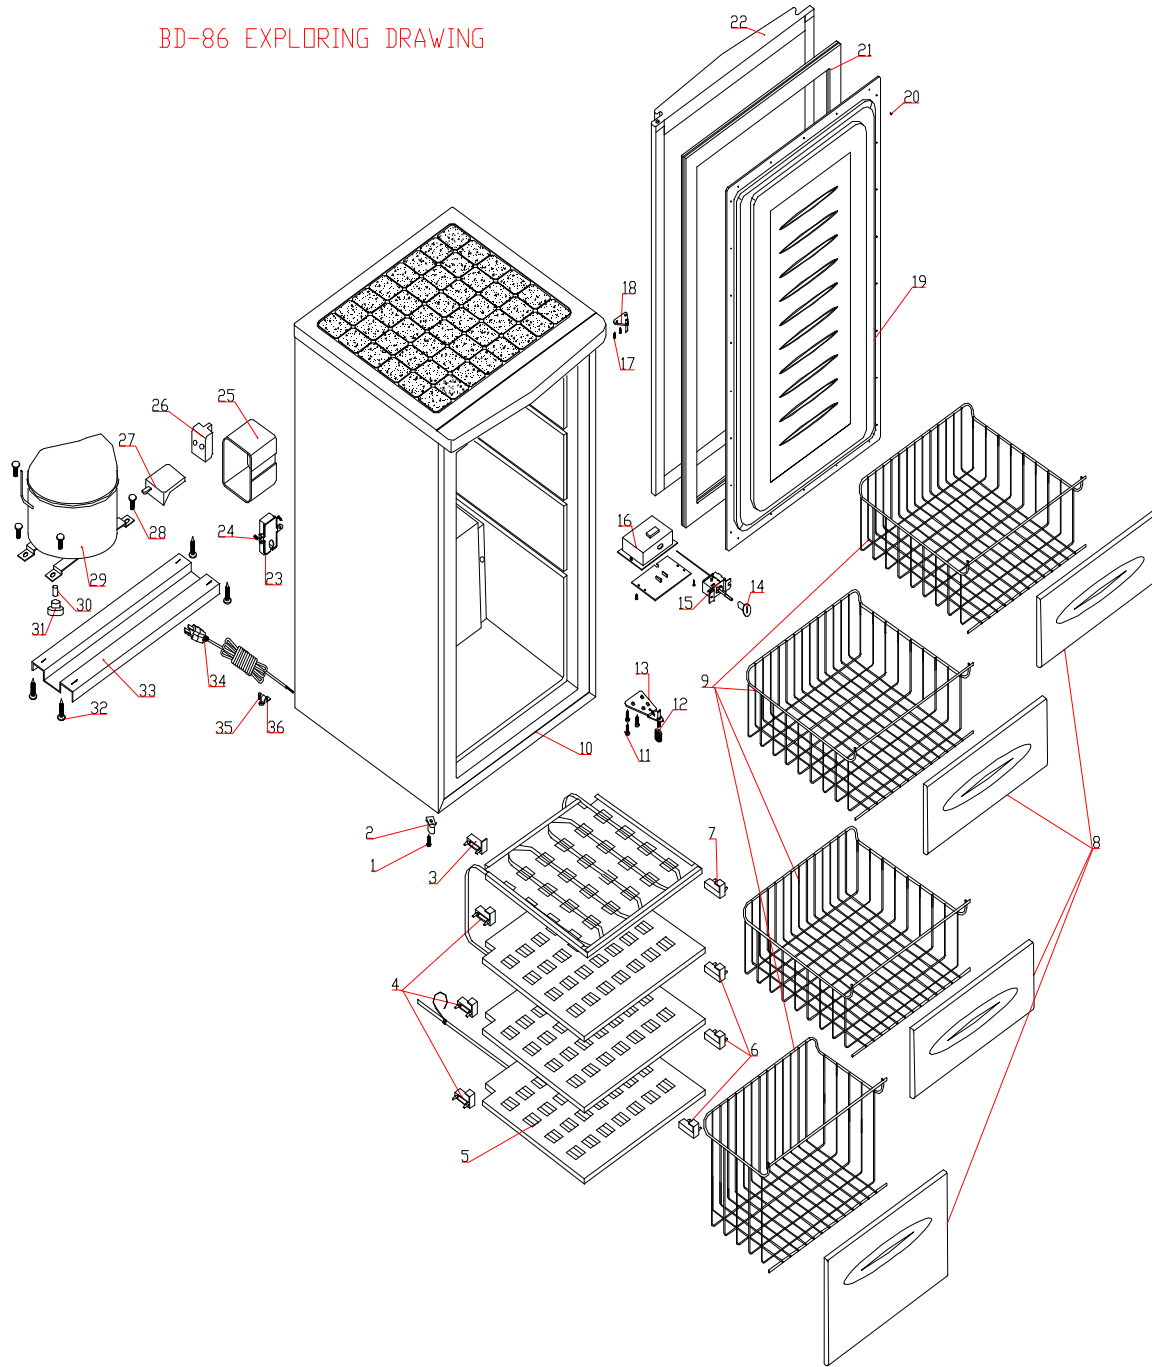

Parts List for VM319W

No.	Part No.	Description
1	Unavailable	Tapping Screw
2	B102.5.1-1	Fixed Leg
3	B154.0-7	Left Upper Block For Evaporator
4	B154.0-9	Left Nether Block For Evaporator
5	B154.0-5	Evaporator
6	B154.0-10	Right Upper Block For Evaporator
7	B154.0-8	Right Upper Block For Evaporator
8	B154.0-4/U	Drawer Cover Upper (Small)
8	B154.0-4/L	Drawer Cover Lower (Large)
9	B154.0-1/U	Drawer Upper (Small)
9	Z-B154.0-1/L	Drawer Lower (Large)
10	B154.5	Cabinet
11	Unavailable	Tapping Screw
12	B107	Adjustable Leg
13	B151	Bottom Hinge
14	B141.0-13	Thermostat Knob
15	B133.1	Thermostat
16	B141.0-11	Thermostat Enclosure
17	Unavailable	Tapping Screw
18	B110.4	Top Hinge
19	B154.6-1	Door Liner
20	Unavailable	Tapping Screw
21	B110.6.1	Door Gasket
22	B154.6	Foamed Door
23	B103.12.1C	Bracket Cover
24	Unavailable	Tapping Screw
25	Unavailable	PTC Starter Cover
26	B101.2-3	PTC Starter
27	B101.2-4	Overload Protector
28	Unavailable	Screw
29	B101.2	Compressor
30	Unavailable	Copper Tube
31	Unavailable	Rubber Seal
32	Unavailable	Tapping Screw
33	B102.5.1-2	Compressor Base
34	B102.1	Power Supply Cord
35	Unavailable	Tapping Screw
36	B102.1-2	Power Cord Clip