


Explosion View of WC3200BG

Explosive Drawing-90

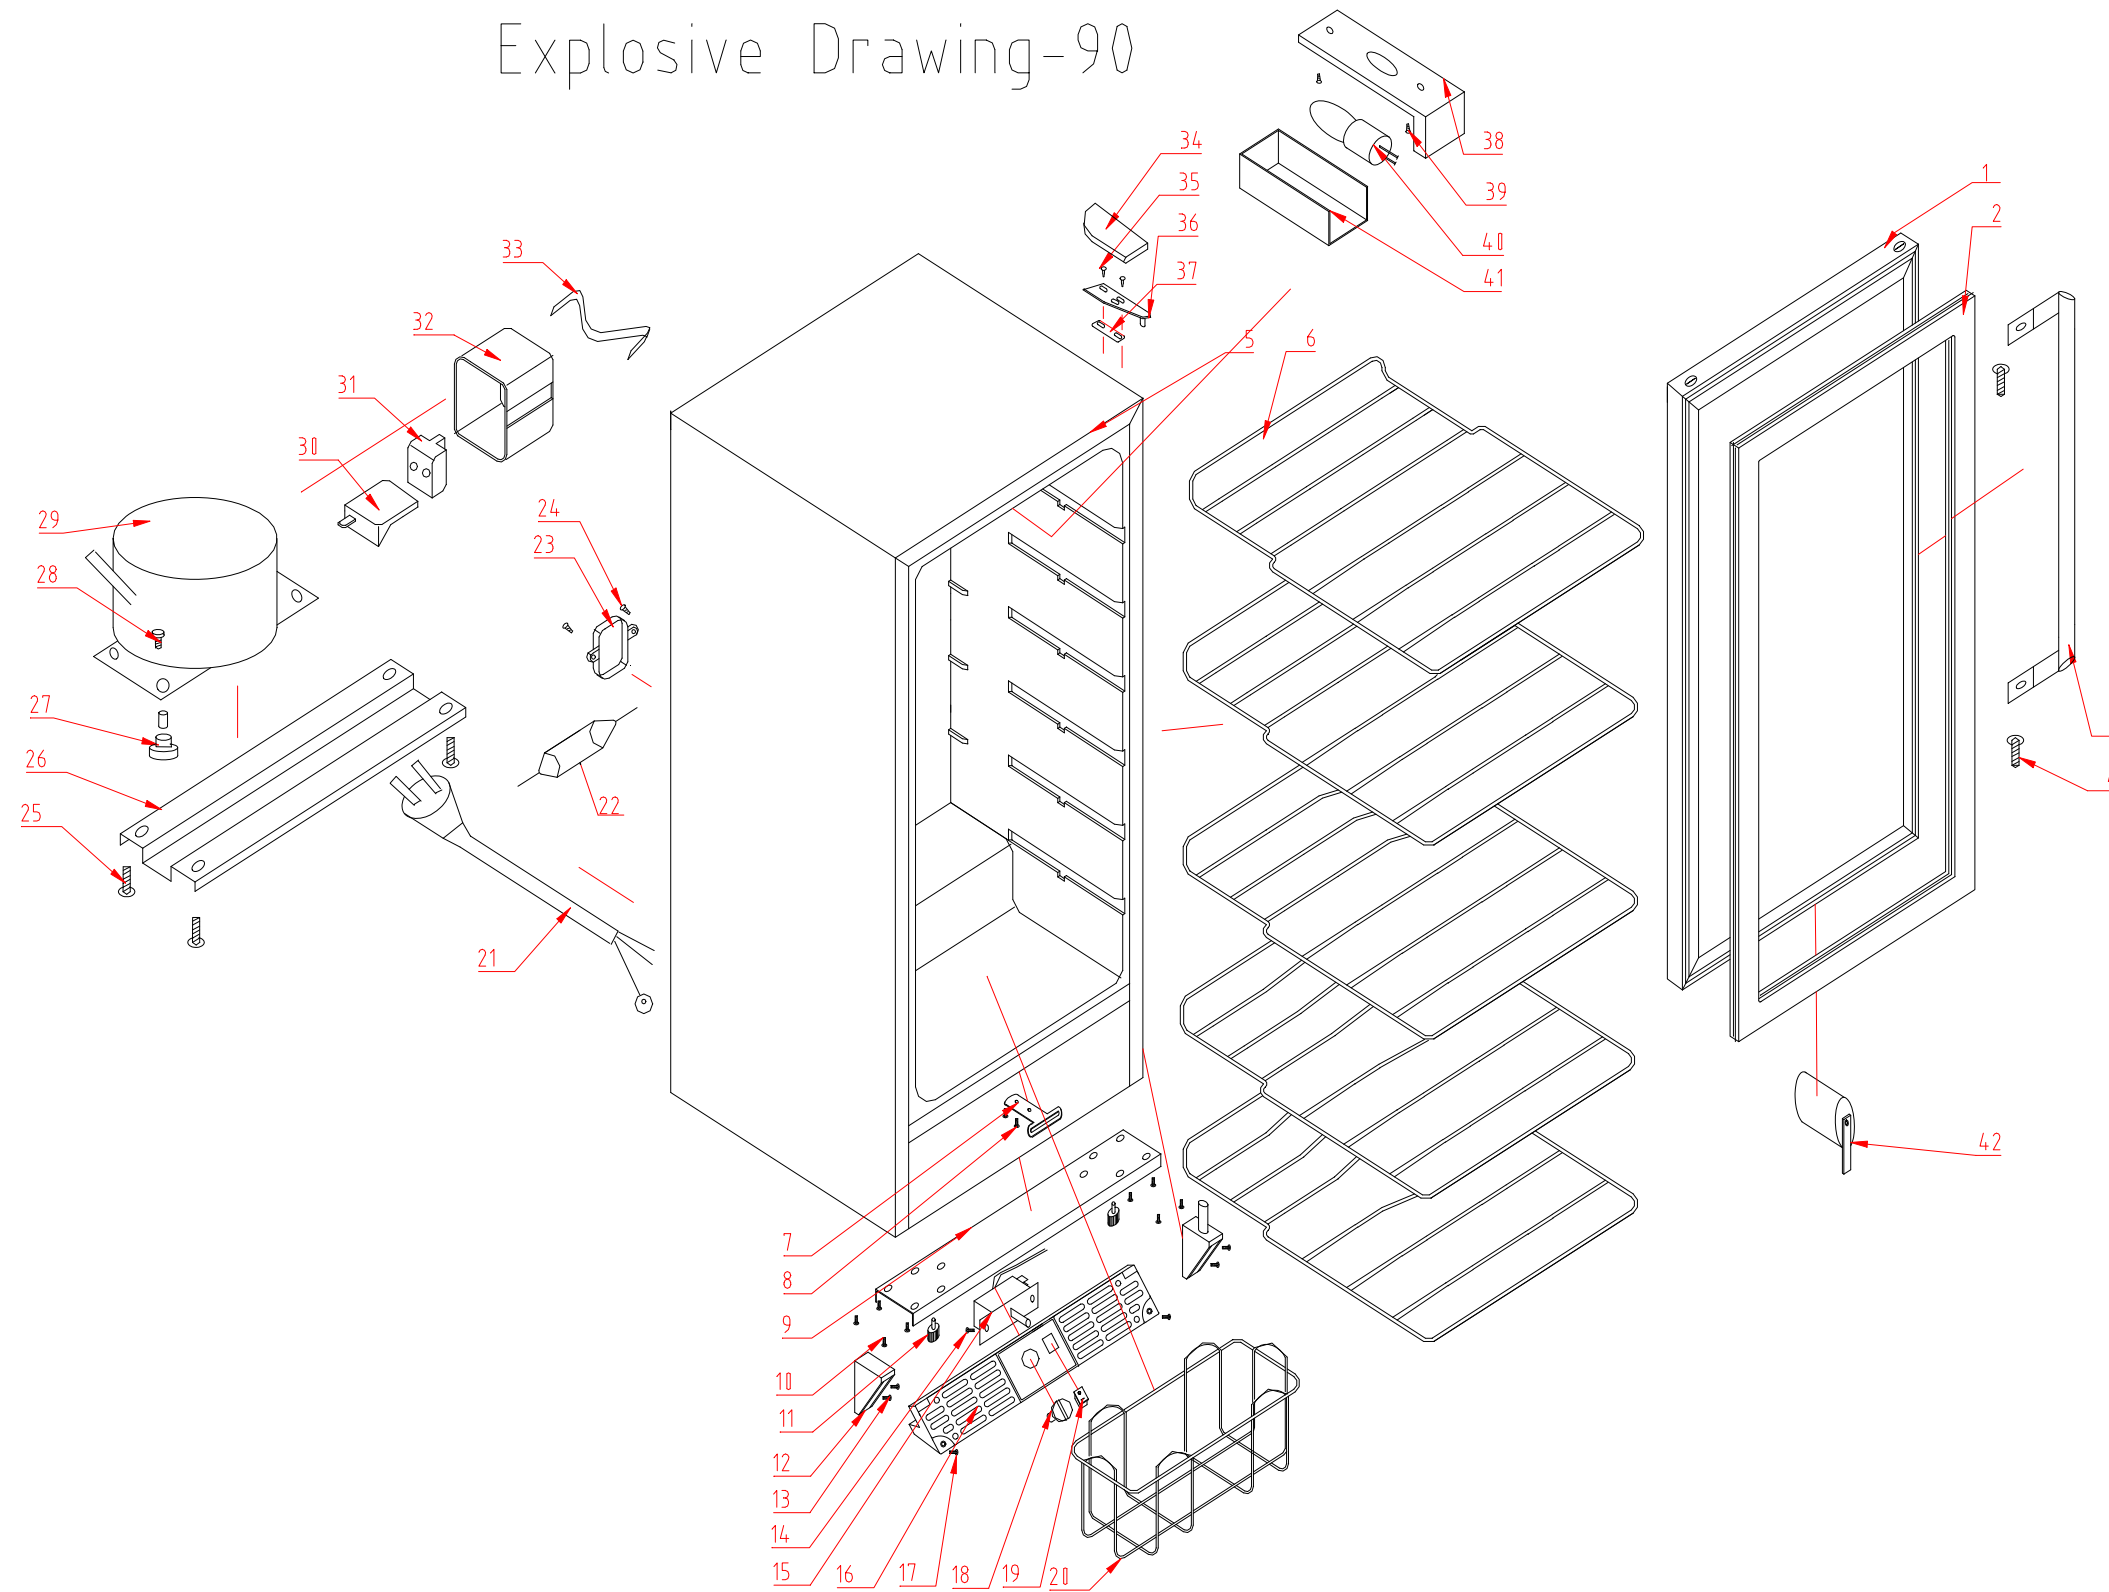

Parts List of WC3200BG

No.	Part Number	Destription
1	B145.7	Glass Door
2	B145.7.3	Gasket
3	B107/WC3200	Door Handle
4		Self -Tapping Screw
5	B145.2	Cabinet
6	B145.0-1	Shelf
7	B107.	Lock block
8		Self-tapping Screw
9	B145.0-2	Front Cabinet Base
10		Self-tapping Screw
11	B102	Adjustable leg
12	B145.2-2	Bottom Hinge
13		Self-tapping Screw
14		Self-tapping Screw
15	B145.2-5	Thermostat
16	B145.1-1	Bottom Grill
17	b115.5	Self-tapping Screw
18	B101.0-1	Thermostat Knob
19	B107	Light Switch
20	B145.8	Bottom Basket
21	B102.1	Power Supply Cord
22	B107.7	Drier
23	B103.8.2-6	Thermostat Enclosure
24		Screw
25		Screw
26	B145.0-3	Compressor Base
27		Grommet
28		Screw
29	B101.2	Compressor
30	B101.2-3	PTC Starter
31	B101.2-4	Overload Protector
32	B101.2-2	Relay Cover
33	B101.2-1	Relay Cover Clip
34	B105.0-1	Upper Hinge Cover
35		Screw
36	B107D.2-1	Upper Hinge
37		Paper Washer
38	B130.0-13	Lamp House Holder
39		Screw
40	B130.0-15	Lamp Holder
41	B130.0-14	Lamp House
42		Lock