



# WCR684C

S/N	Parts No.	Parts Name	Pcs
1	DG11-4	DRIER	1
3	DG2-11	POWER CORD	1
4	DG13-1	WATER TANK	1
5	DG13-24	Anti-vibration Block	1
6	AYE60Y42	COMPRESSOR	1
7	DG17-25	COMPRESSOR GROUND LINE	1
8	DG17-93	COMPRESSOR GROUND LINE	1
9	DG12-112	SEAL PIPE	2
10	DG22-302	POWER BOARD INSTALLATION BOX	1
11	DG6-1003.1	TRANSFORMER	1
12	DG3-1080	PCB	1
14	DG13-8	DECORATIVE FASTENER	3
15	DG13-1094	LED COVER	16
16	DG3-1069-W	LED LAMP	16
17	DG14-1072-R-B	RIGHT UPPER DOOR HINGE	1
18	DG18-501	EVAPORATOR FOAM	2
19	DG12-59	EVAPORATOR	1
20	DG8-8	DEFROST SENSOR	1
21	DG7-3.1	EVAPORATOR FAN	2
22	DG22-1185	AIR-DUCT BOARD A	1
23	DG13-1063	CHARCOAL FILTER	1
24	DG13-198	SENSOR COVER	2
25	DG8-8	SENSOR	2
26	DG19-6	FAN COVER	2
27	DG3-1003.3	LED LAMP	1
28	DG13-1098	ELECTRIC CONTROL BOX	1
29	DG13-1099	DISPLAY BOARD BRACKET	1
30	DG20-1088	CONTROL PANEL FILM	1
31	DG22-1194.1-S	CONTROL PANEL FILM BRACKET	1
32	DG15-1079.1	WH1 WOOD SHELF (BURGUNDY)	6
34	DG22-1197	DOOR UPPER COVER PLATE	2
35	DG14-1014.2	DOOR AXIS	1
36	DG23-1106	DOOR	1
37	DG15-1085	BOTTOM WOOD SHELF	1
38	DG15-1080	WI WOOD SHELF	1
39	DG15-1079	WH WOOD SHELF	8
40	DG13-7	SHELF SUPPORT	2
41	DG22-1021	12INCH RAIL	1 set
42	DG22-1020.1	18INCH RAIL	14 set
43	DG9-1002	SWIFT FOR DOOR LAMP	1
44	DG14-105.1	LOCK	1
45	DG13-1084	BOTTOM GRILLE	1
46	DG13-6.1	CABINET LEG	4
47	DG14-1073-R-B	RIGH LOWER DOOR HINGE	1
48	DG14-1074	spacing iron	1
49	DG22-240	SUPPORT BRACKET OF FRONT LEGS	1
50	DG14-1073-L-B	LEFT LOWER DOOR HINGE	1
51	DG12-3	CONDENSOR	1
52	DG12-1029.2	SUCTION PIPE ASSEMBLY	1
53	DG22-254	COMPRESSOR BRACKET	1
54	DG7-23	OUTSIDE FAN	1
55	DG19-3	FAN COVER	1
56	DG14-56	OUTSIDE FAN BRACKET	2
	DG14-1072-R-B	LEFT UPPER DOOR HINGE	1