


# DG 2401 C

C6N0EL001X

tav. 1  
cat. 18.C3705

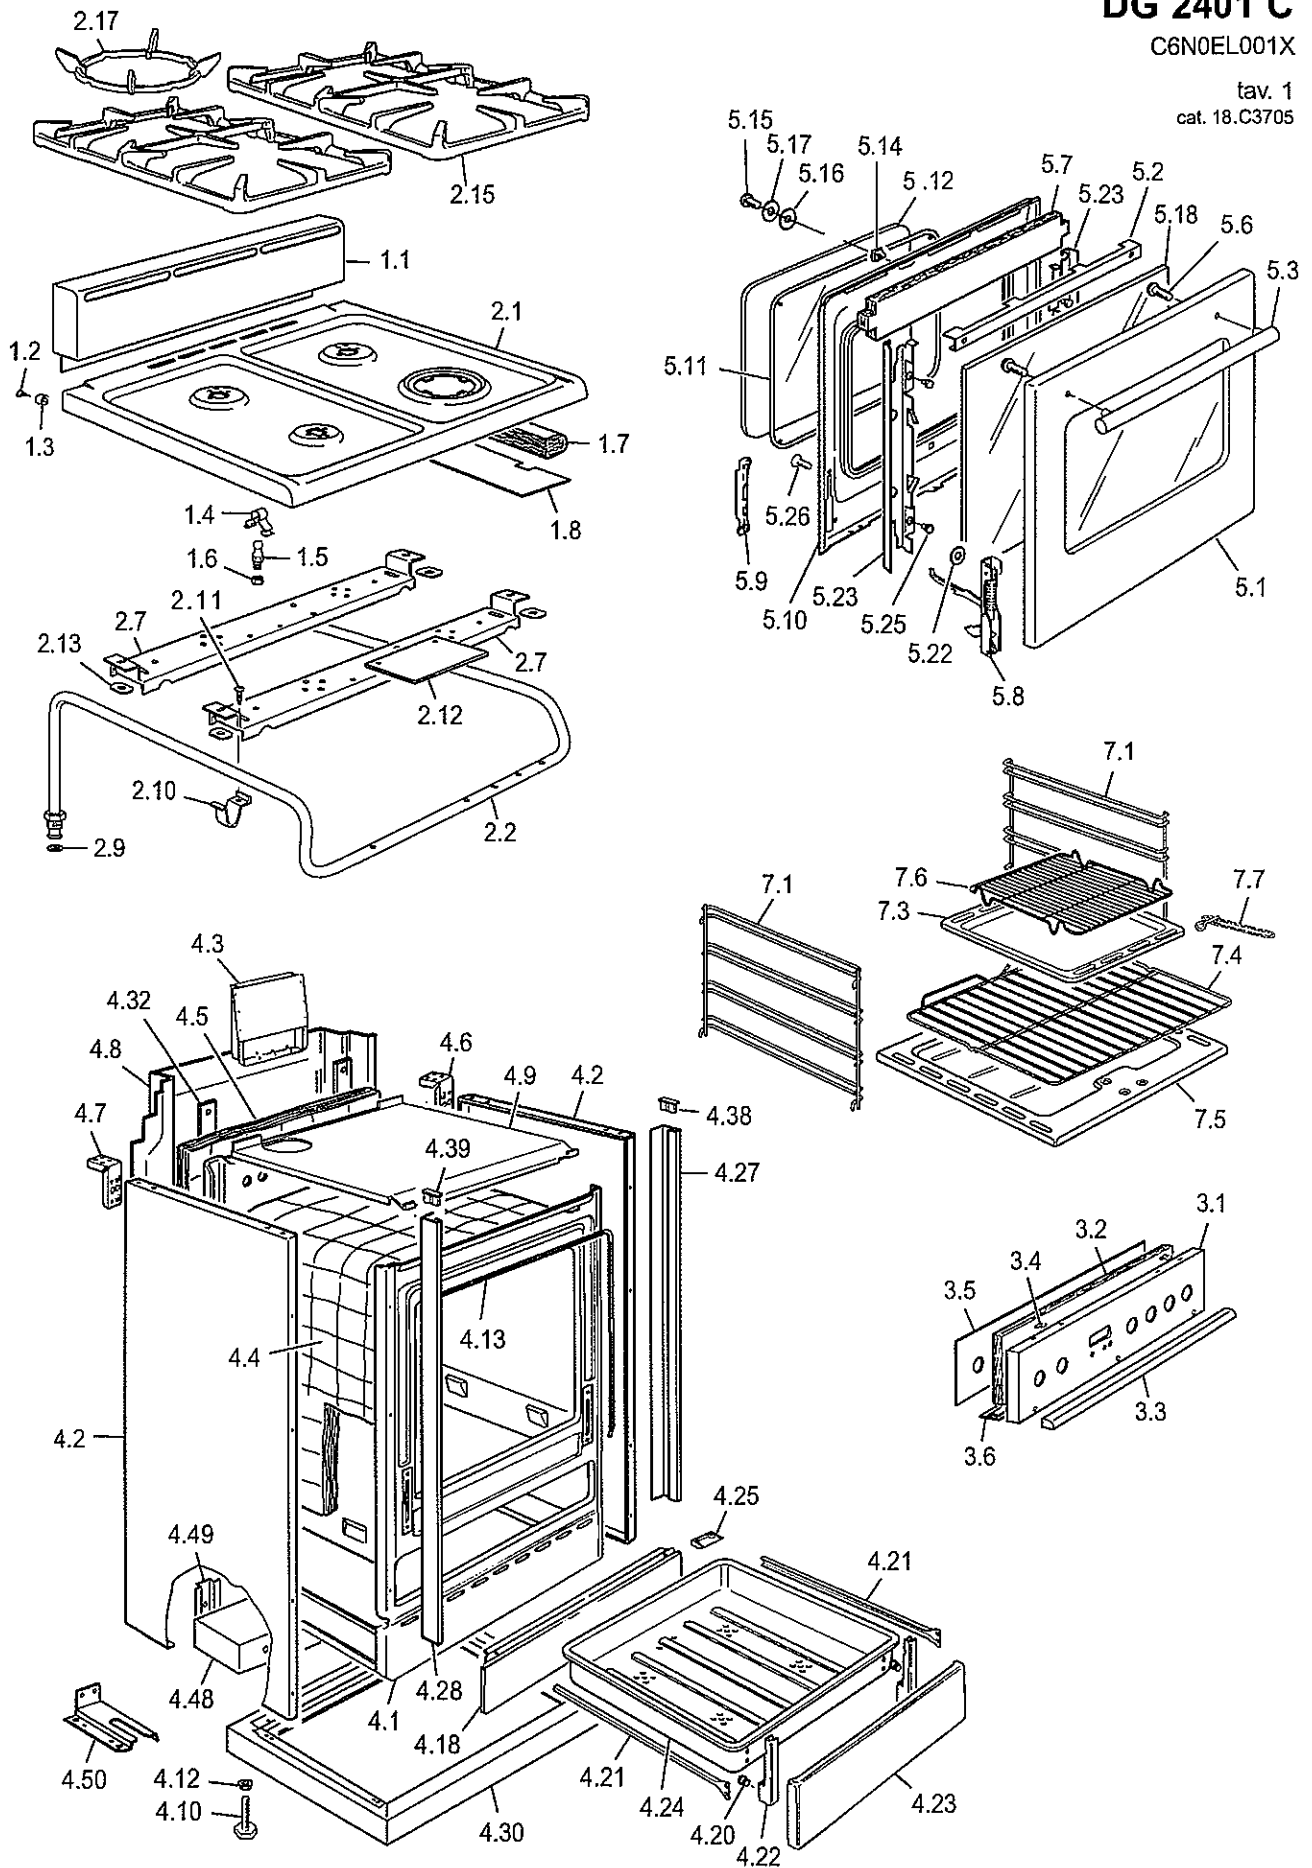


REF.	CODE	DESCRIPTION	REF.	CODE	DESCRIPTION
1.1	103839061	Rear trim	5.1	032611669E	Door glass
1.2	001130	Screw	5.2	4116111	Handle bar
1.3	040031002	Plug	5.3	037231062A	Door handle
1.4	035100	Spring	5.6	001071	Screw M5x16
1.5	103615	Pin	5.7	030097.1	Door insulation
1.6	214062	Nut	5.8	063089	Door hinge male
1.7	030150.1	Cooktop insulation	5.9	063025	Door hinge female
1.8	094505	Insulation support	5.10	373FF707K	Door panel
2.1	3316S405S	Cooktop	5.11	053084	Gasket
2.2	3426N40005	Manifold	5.12	0311000.1T	Inner glass
2.7	51B6N01	Burners support	5.14	214021	Nut
2.9	053024.1	Gasket	5.15	001214	Screw
2.10	094254	Fixing plate	5.16	003035	Washer
2.11	001227	Screw	5.17	103205	Washer
2.12	094504	Electronic timer protection	5.18	0312039	Third glass
2.13	003066	Insulation washer	5.22	003041	Washer - R 5,7x15
2.15	217602	Pan-support	5.23	51B5616	Inner glass support
2.17	217498	Wok grid	5.25	040056	Third glass rubber
3.1	35N6P17SNT	Control panel	7.1	217291	Shelf support
3.2	030149.1	Control panel insulation	7.3	48B5001K	Grill-pan tray
3.3	103761	Control panel trim	7.4	217439	Oven shelf
3.4	213007	Clip	7.5	47EN604K	Oven floor
3.5	4116N03	Insulation support	7.6	217251	Grill-pan grid
3.6	053092	Control panel seal	7.7	037253	Grill-pan grid handle
4.1	4506N1GG12	Oven frame			
4.2	36C6100S	Side panel			
4.3	46A6N04Z	Funnel			
4.4	030113.1	Oven insulation			
4.5	030085.1	Rear insulation			
4.6	094417DX	Rear right coupler			
4.7	094417SX	Rear left coupler			
4.8	4116N04	Rear panel			
4.9	4216101Z	Upper shelter			
4.10	103854	Shim			
4.12	214056	Nut shim			
4.13	053039	Seal			
4.18	103160061	Base panel			
4.20	040012	Buffer			
4.21	094075	Drawer rail			
4.22	094138	Drawer fixing bracket			
4.23	39E6601YS	Drawer front panel			
4.24	39K6101Y	Drawer			
4.25	081073	Drawer stopper			
4.27	083290061	Right front trim			
4.28	083289061	Left front trim			
4.30	68061010	Plinth			
4.32	4219604Z	Rear insulation support			
4.38	081068/NS	Right stopper			
4.39	081067/NS	Left stopper			
4.48	103326	Balance weight			
4.49	213016	Balance weight bracket			
4.50	094495	Anti-tip stability device			

# DG 2401 C

C6N0EL001X

tav. 2  
cat. 18.C3705

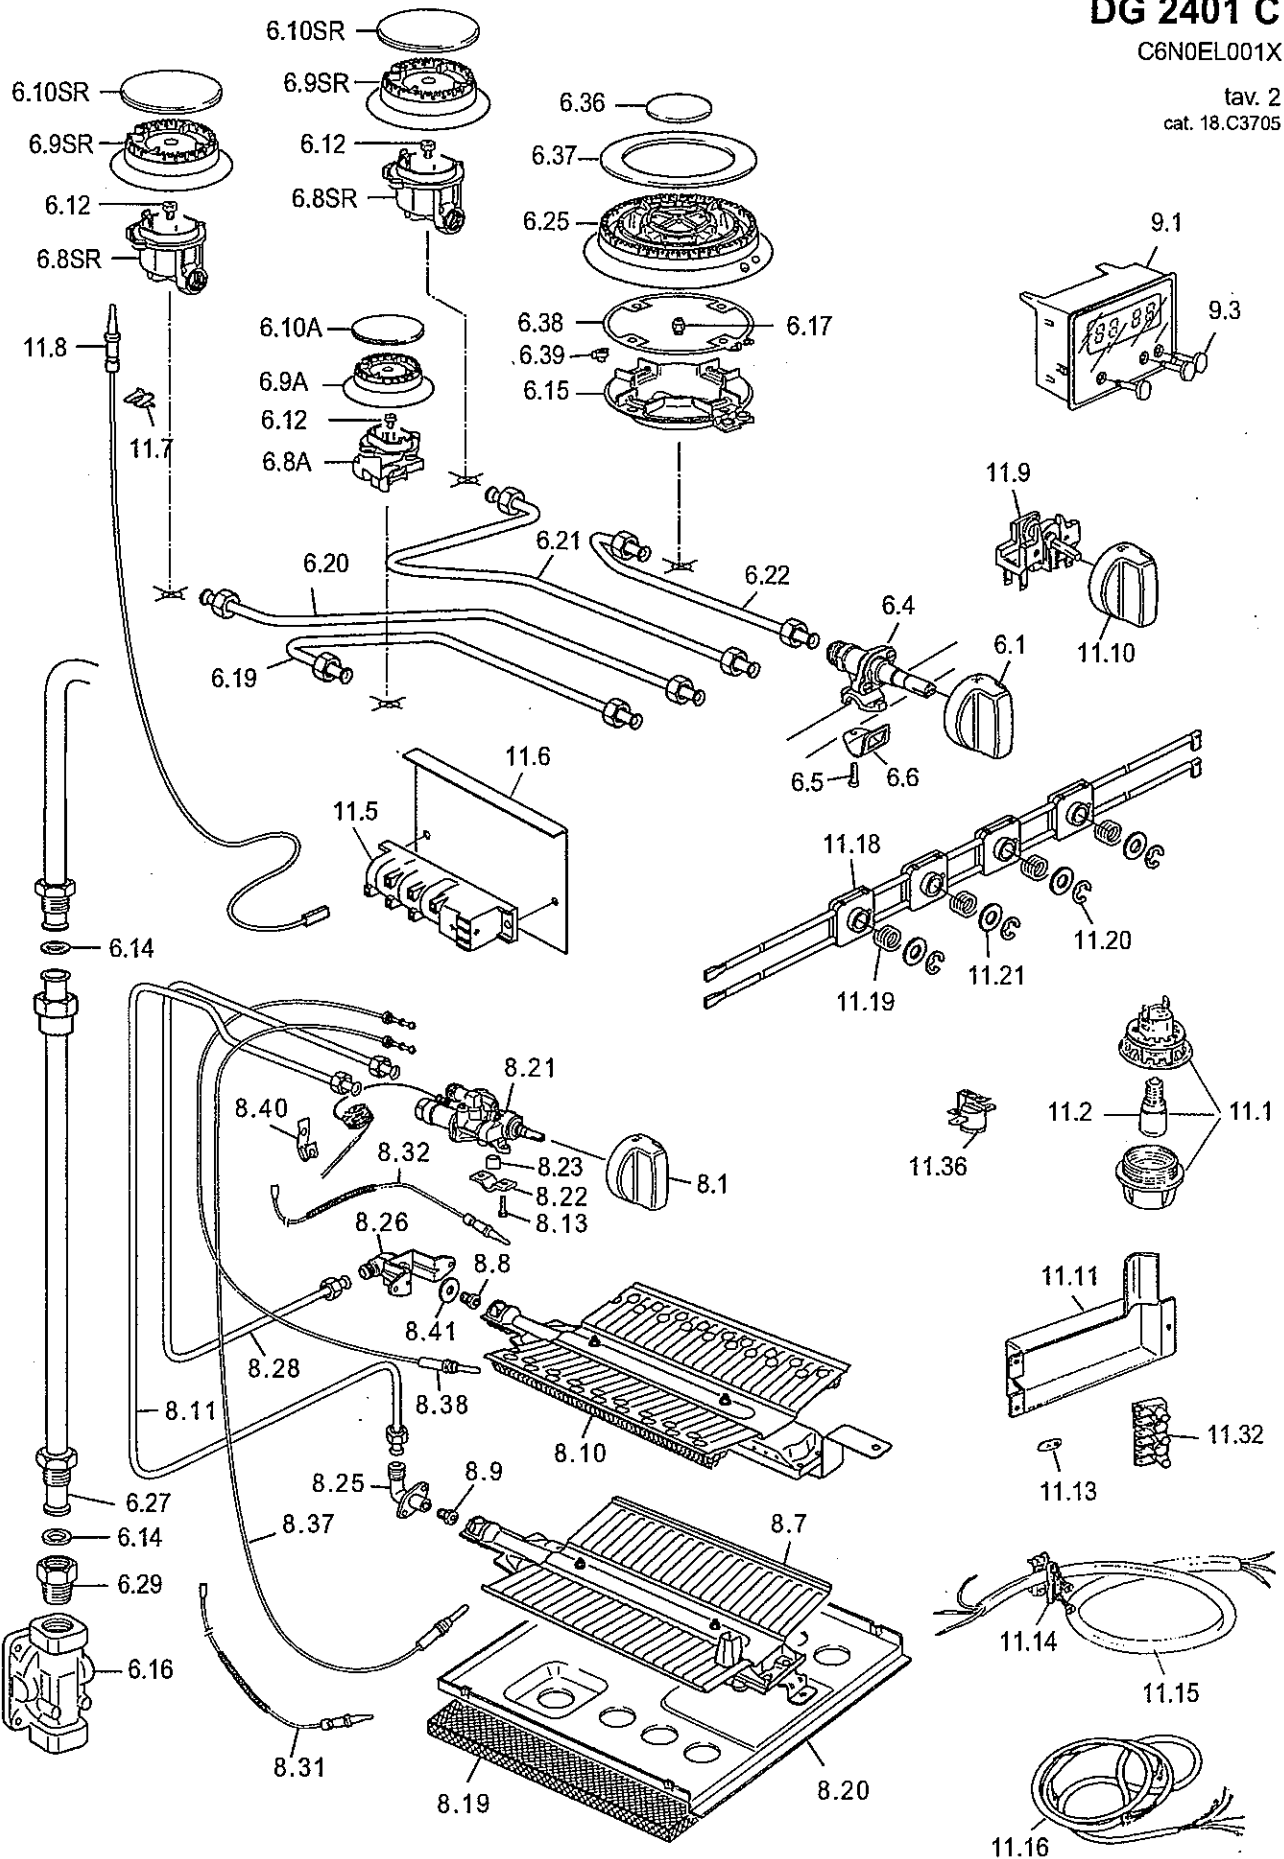

REF.	CODE	DESCRIPTION	REF.	CODE	DESCRIPTION
6.1	2183A07367	Burner knob	9.1	074071	Electronic timer
6.4	106240	Tap - Ø 0.27 A	9.3	103271009	Button
=	106241	Tap - Ø 0.32 SR	11.1	072005	Lamp holder
=	106243	Tap - Ø 0.65 TR	11.2	073013005	Lamp - 15 W
6.5	001233	Tap fixing screw	11.5	082072	6 Burners ignition coil
6.6	094382	Tap bracket	11.6	094413	Burners ignition coil bracket
6.8A	215465	A burner-cup	11.7	035094	Igniter spring
6.8SR	215466	SR burner-cup	11.8	084028	Igniter - L = 250 mm
6.9SR	068110001S	SR burner head	=	084029	Igniter - L = 630 mm
6.9A	068109001S	A burner head	=	084033	TR - Igniter - L = 500 mm
6.10A	216129005A	A burner-cap	11.9	050058	Oven light switch
6.10SR	216130005A	SR burner-cap	11.10	2183A57398	Switch oven knob
6.12	101290	Injector - Ø 0.90 - AUX	11.11	103230.1A	Terminal block protection
=	101292	Injector - Ø 0.55 - AUX	11.14	052008	Wire fastener
=	101225	Injector - Ø 1.18 - SR	11.15	054104	Cord
=	101293	Injector - Ø 0.72 - SR	11.16	1131508	Wiring
6.14	053024.1	Elbow gasket	11.18	103851	Ignition switches
6.15	215469	Burner cup TR	11.19	035080	Spring
6.16	103841	Gas pressure regulator 1/2" NG	11.20	003039	Retaining ring
6.17	101291	TR injector - Ø 1.70	11.21	003038	Washer
=	101294	TR injector - Ø 1.02	11.32	051062	Terminal block
6.19	029795	A inlet pipe	-	1102474	Users operating instructions
6.20	029796	SR inlet pipe left	-	1102505	Installation instructions
6.21	029797	SR inlet pipe right			
6.22	029798	TR inlet pipe			
6.27	3426N001	Extension pipe			
6.29	067033	Connection			
6.35	068115001S	TR burner head			
6.36	216132005A	TR Burner-cap inside			
6.37	216133005A	TR burner-cap outside			
6.38	053078	Burner cup gasket			
6.39	040064	Stopper			
8.1	2183A47367	Oven knob			
8.7	215474	Oven burner			
8.8	101070	Broil burner injector - Ø 1.46			
=	101128	Broil burner injector - Ø 0.88			
8.9	101207	Oven burner injector - Ø 1.80			
=	101143	Oven burner injector - Ø 1.09			
8.10	215475	Broil burner			
8.11	029802	Oven inlet pipe			
8.13	001248	Screw			
8.19	4216N02Z	Oven burner protection			
8.20	4216N01Z	Oven burner support			
8.21	066150	Thermostat			
8.22	094503	Bracket			
8.23	053045	Gasket			
8.25	067036	Oven elbow			
8.26	067035	Broil elbow			
8.28	029803	Broil inlet pipe			
8.31	084040	Oven igniter with wire			
8.32	084041	Broil igniter with wire			
8.37	107055	Oven thermocouple - L=1250			
8.38	107056	Broil thermocouple - L=1000			
8.40	213015	Clip			
8.41	003067	Washer			